

F007K PARTS LIST FOR UTG-K(UTH-K) GROUP P.1

UT302D-A

 
A

B


C

D

E

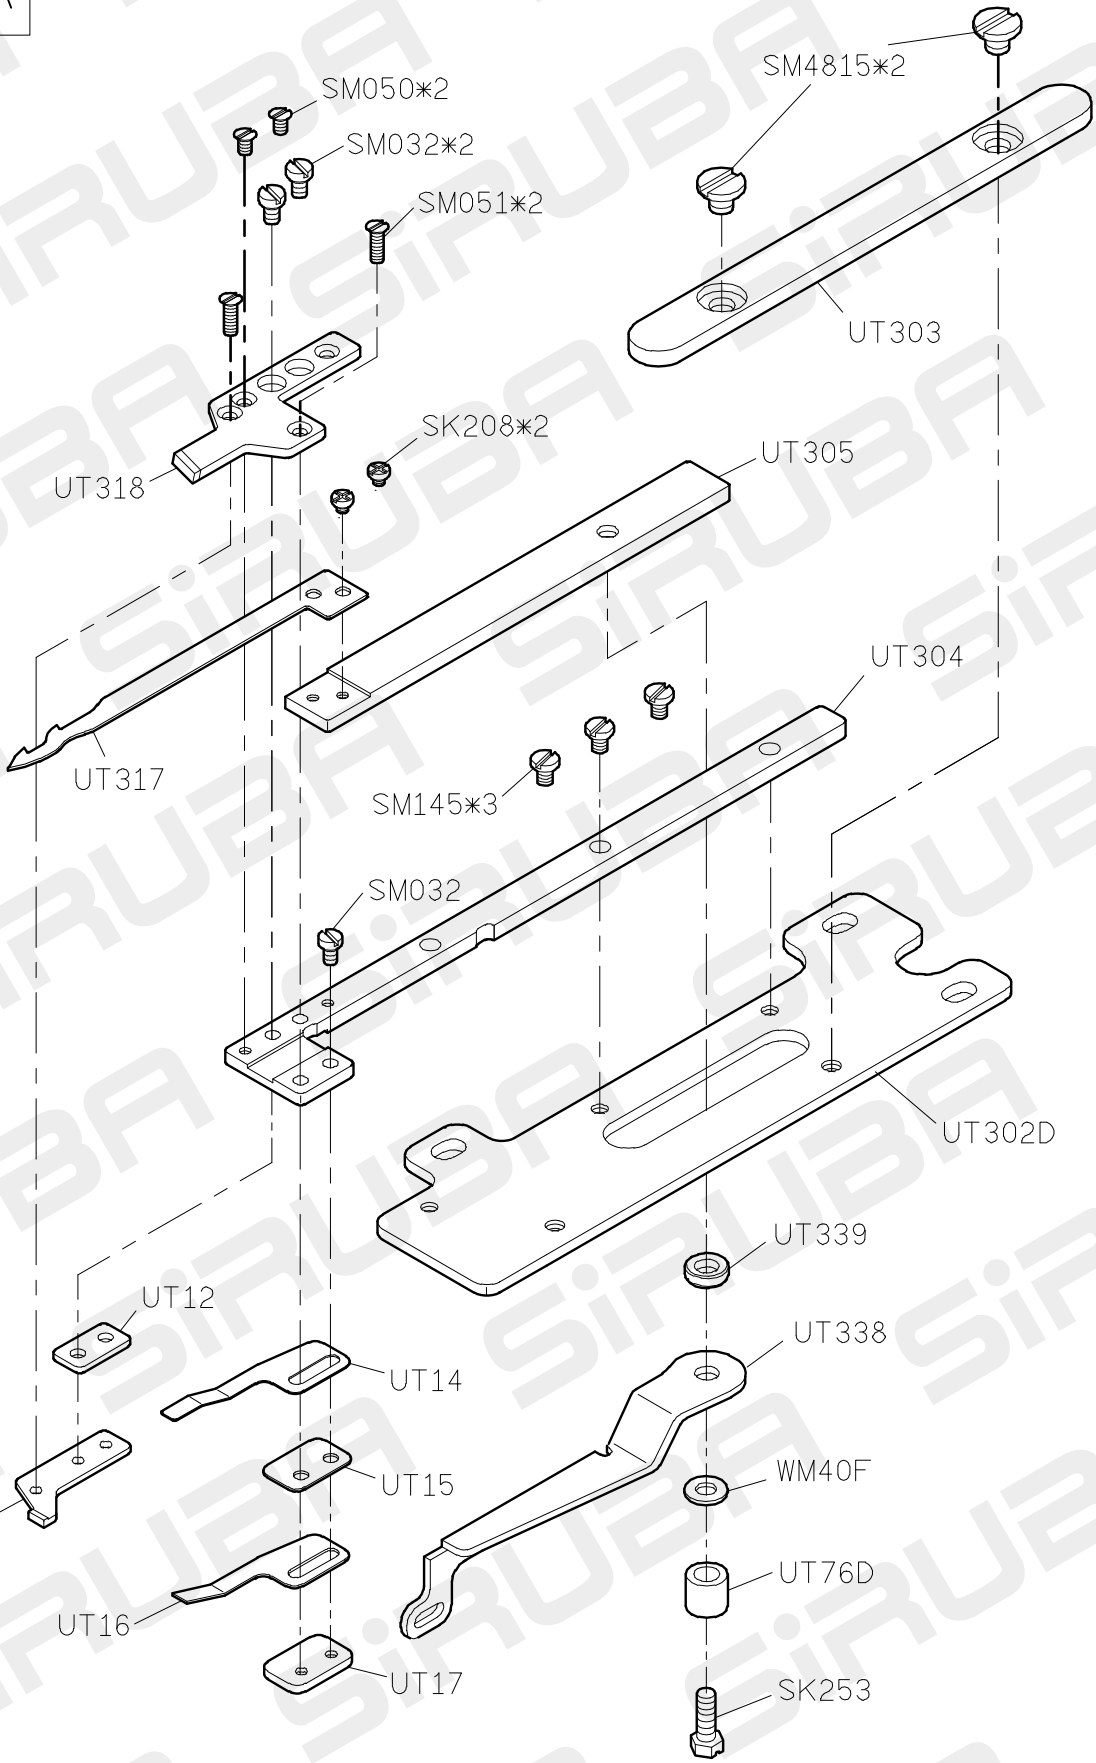

 F007K PARTS LIST FOR UTG-K(UTH-K) GROUP P.2

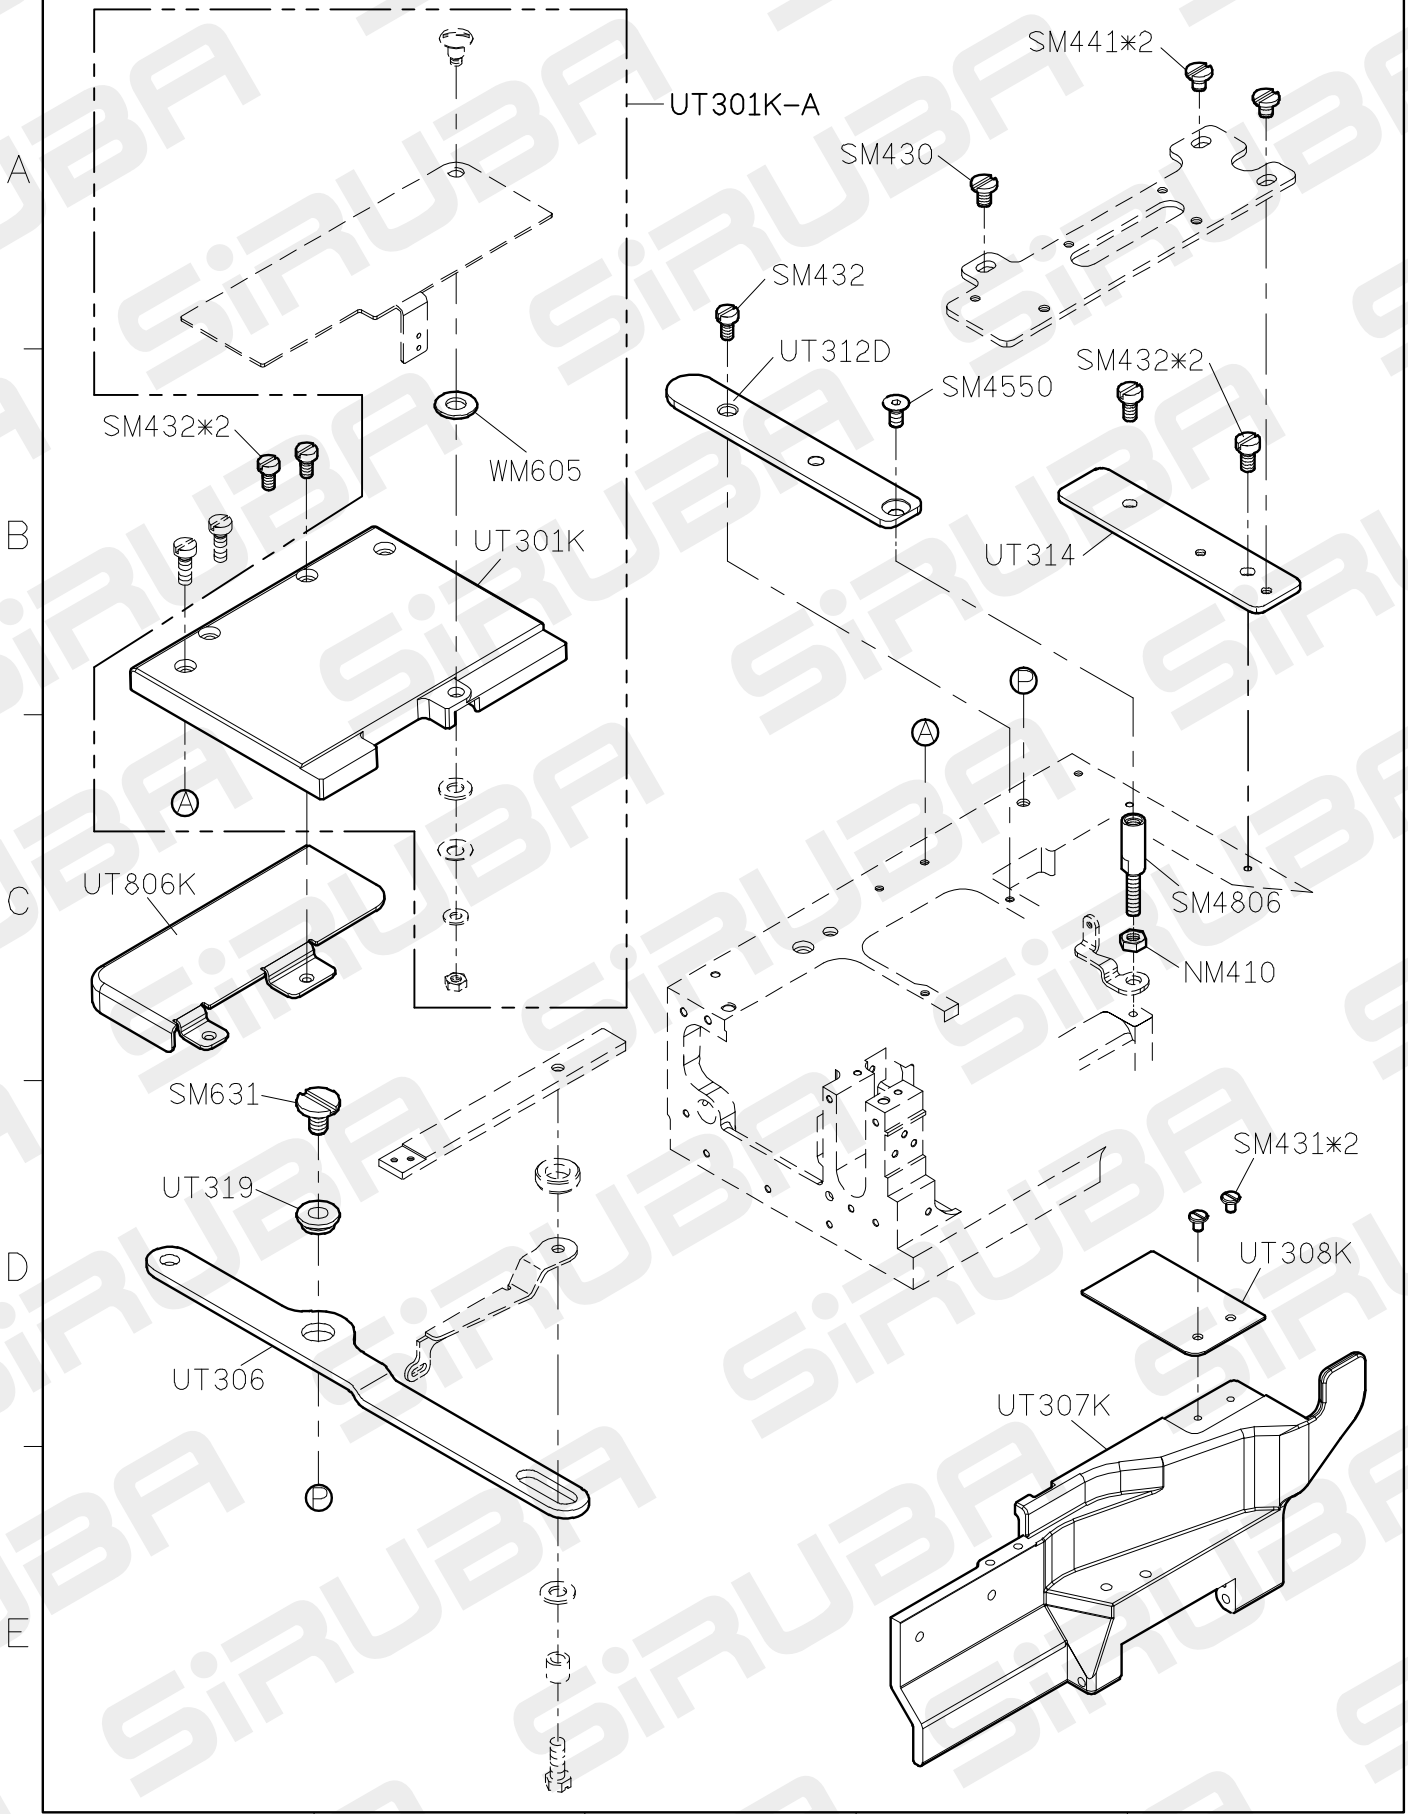


1 FOR F007K/F007KD/F858K/F858KD

3



4

 5

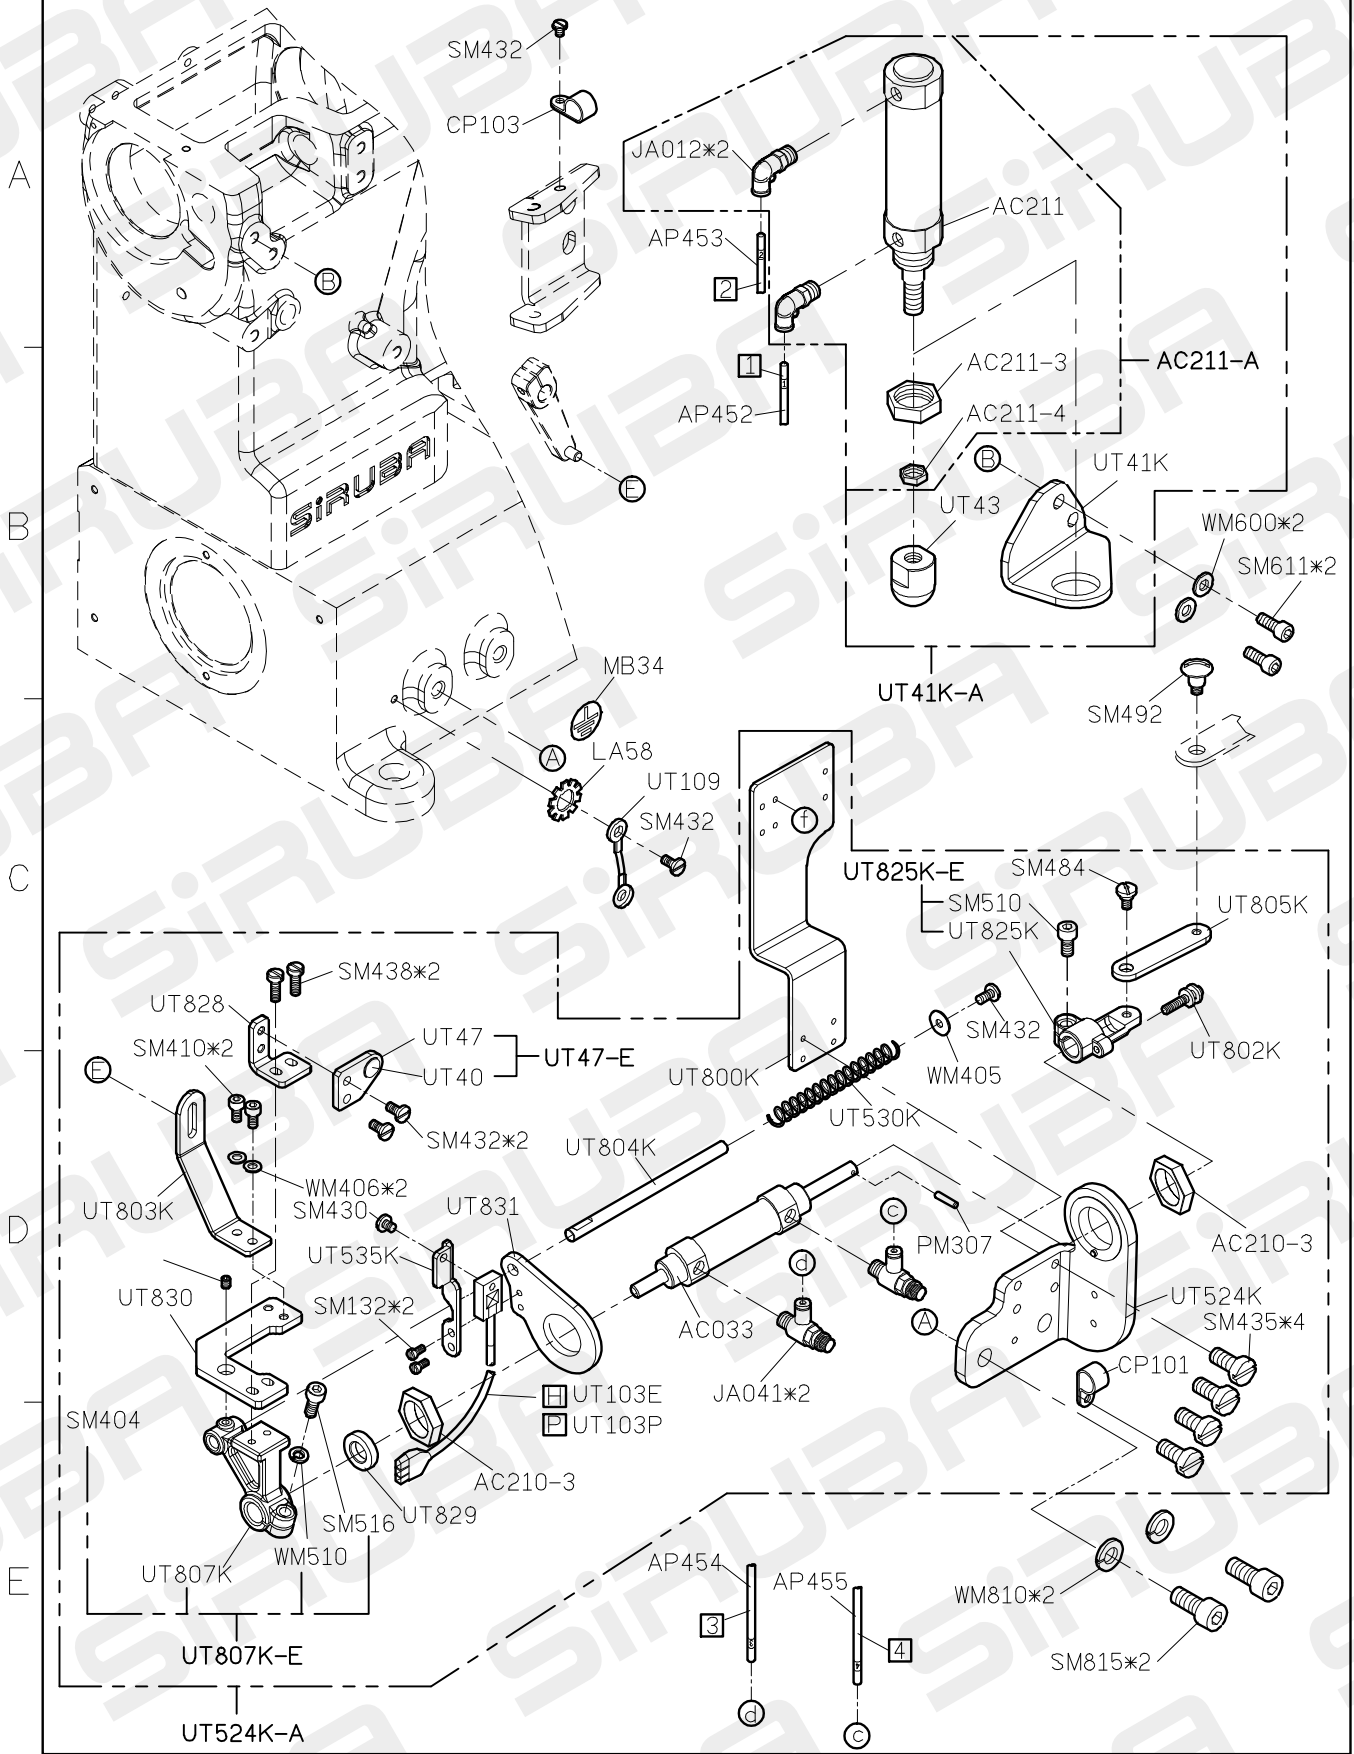F007K PARTS LIST FOR UTG-K(UTH-K) GROUP P.3

 


FOR F007K/F007KD/F858K/F858KD

 FOR H牌馬達
 FOR P牌馬達

11/03/04

F007K PARTS LIST FOR UTG-K(UTH-K) GROUP P.4

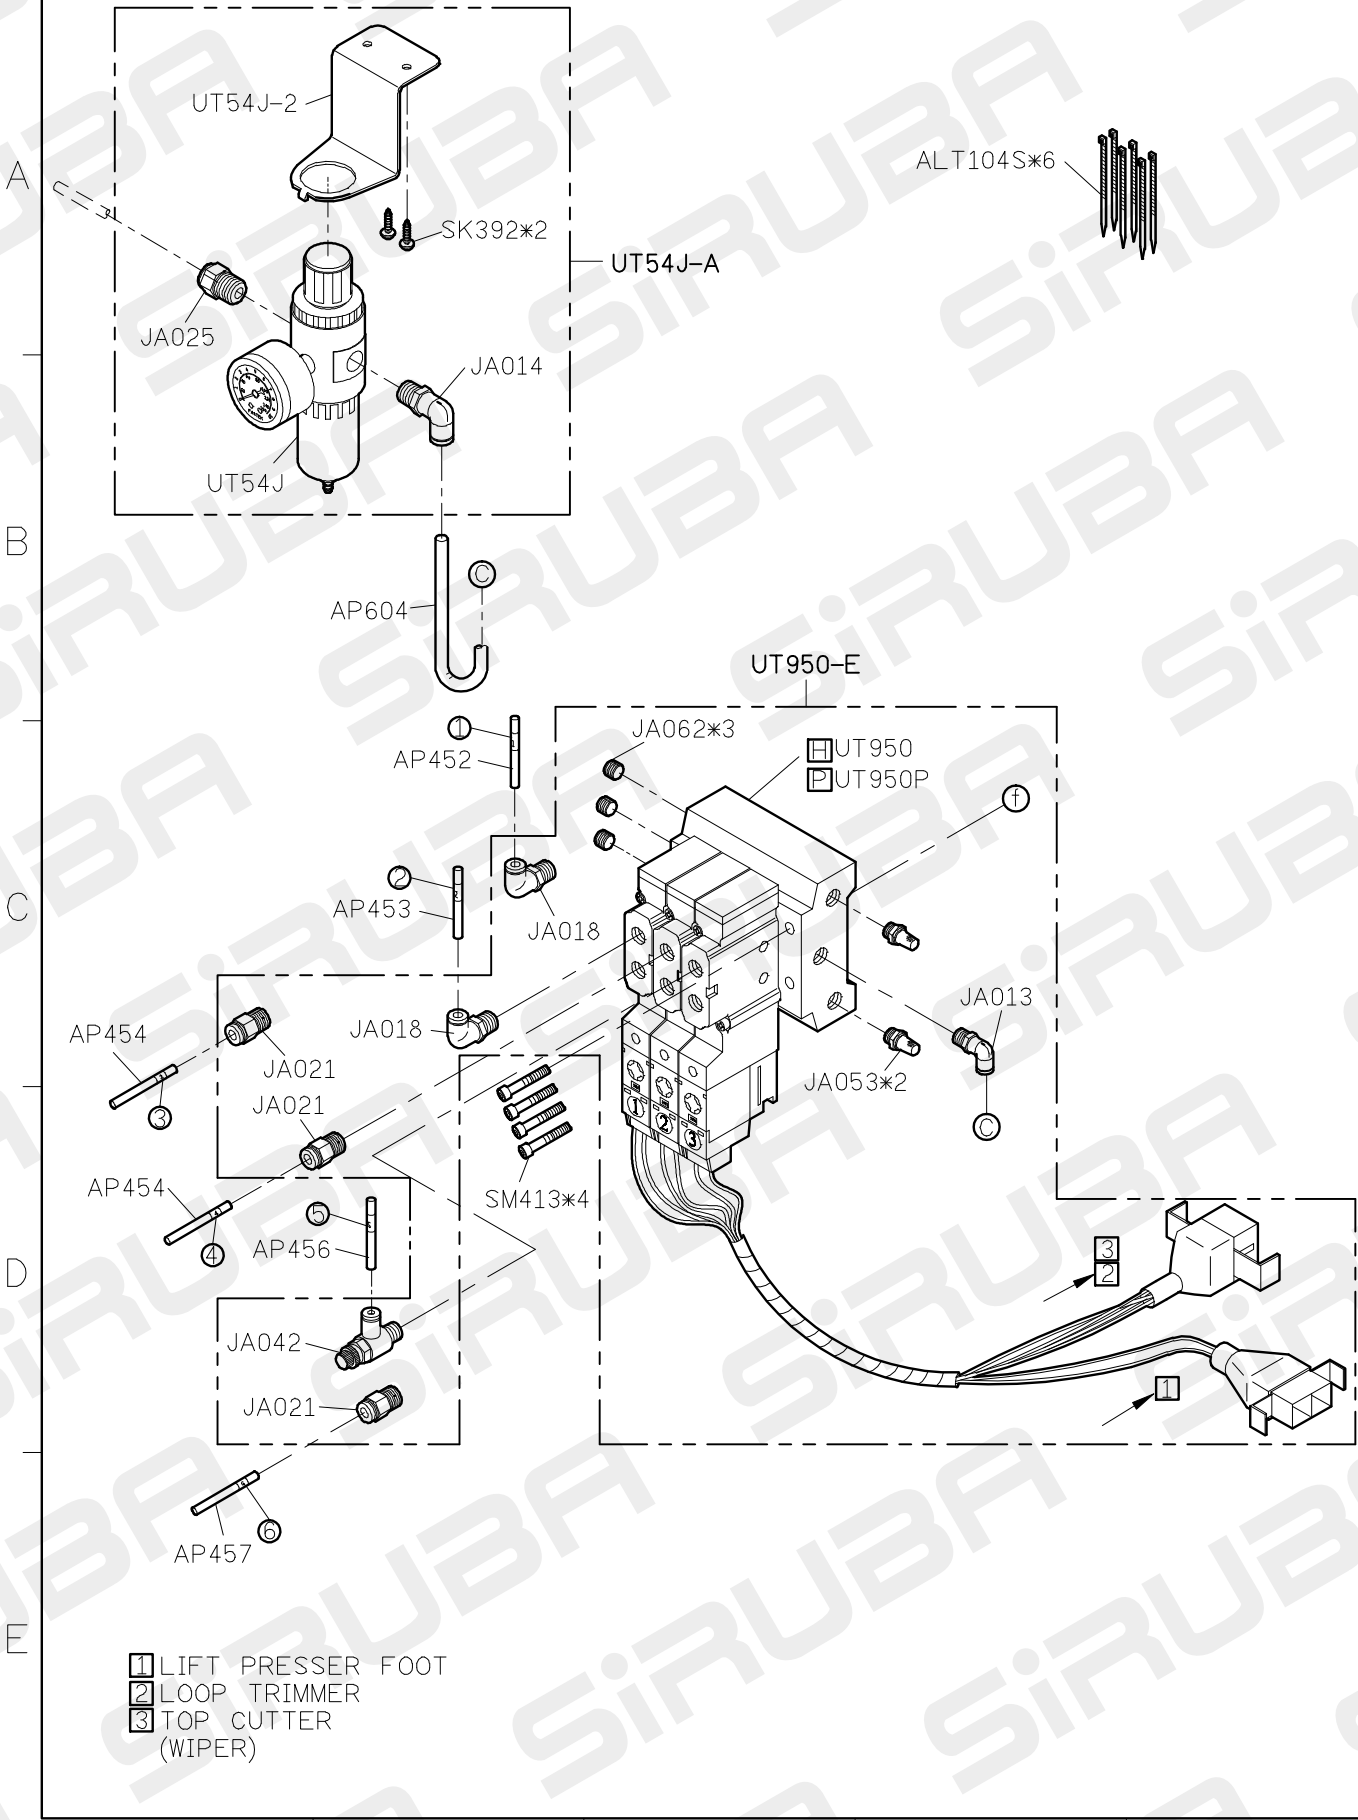

1 FOR F007K/F007KD/F858K/F858KD

3 FOR H牌馬達
 FOR P牌馬達

5 11/03/04

F007K PARTS LIST FOR UTG-K(UTH-K) GROUP P.5

 
A

B


C

D

E

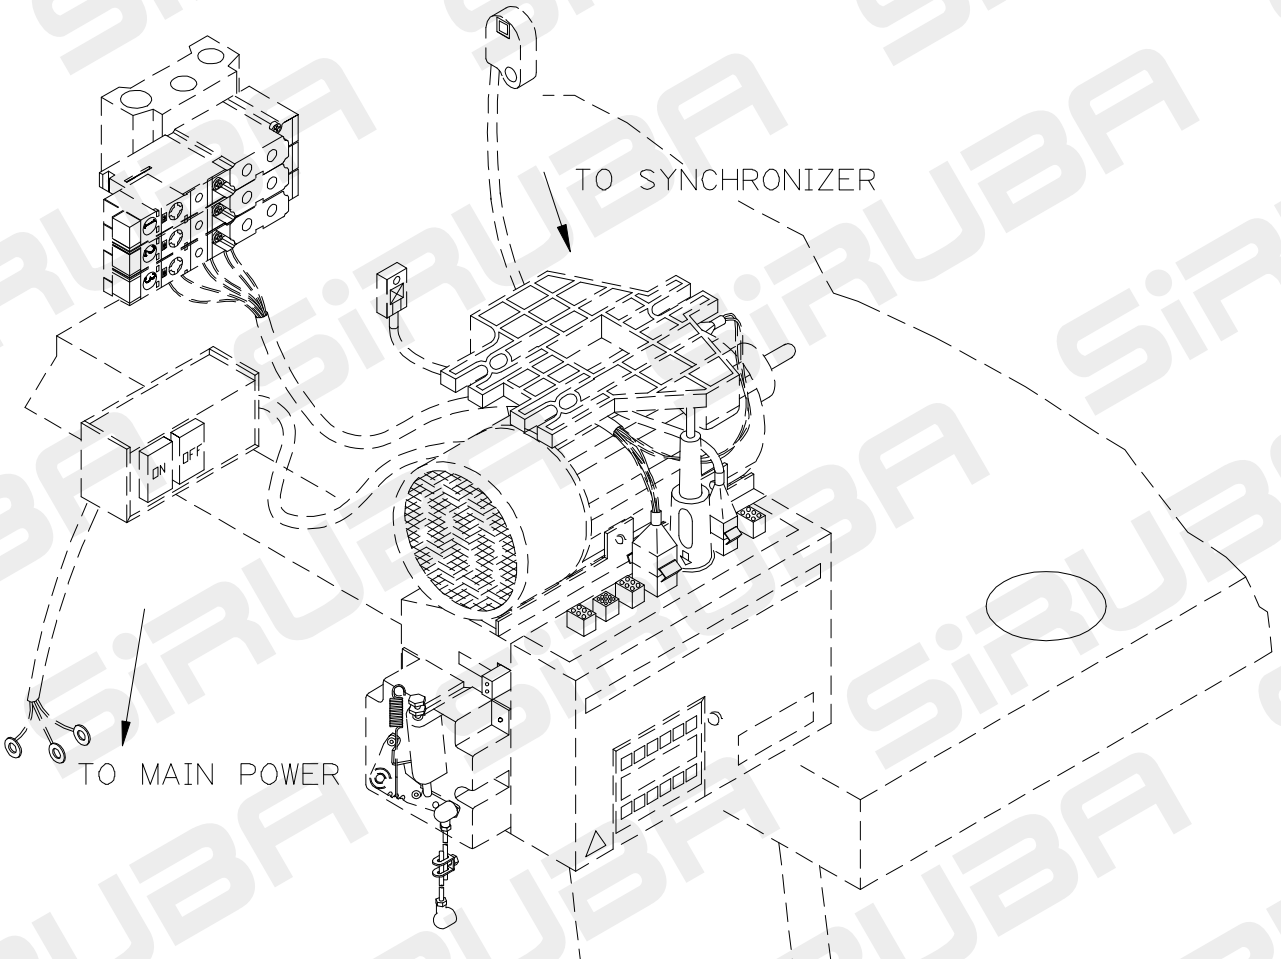

 F007K PARTS LIST FOR UTG-K(UTH-K) GROUP P.6

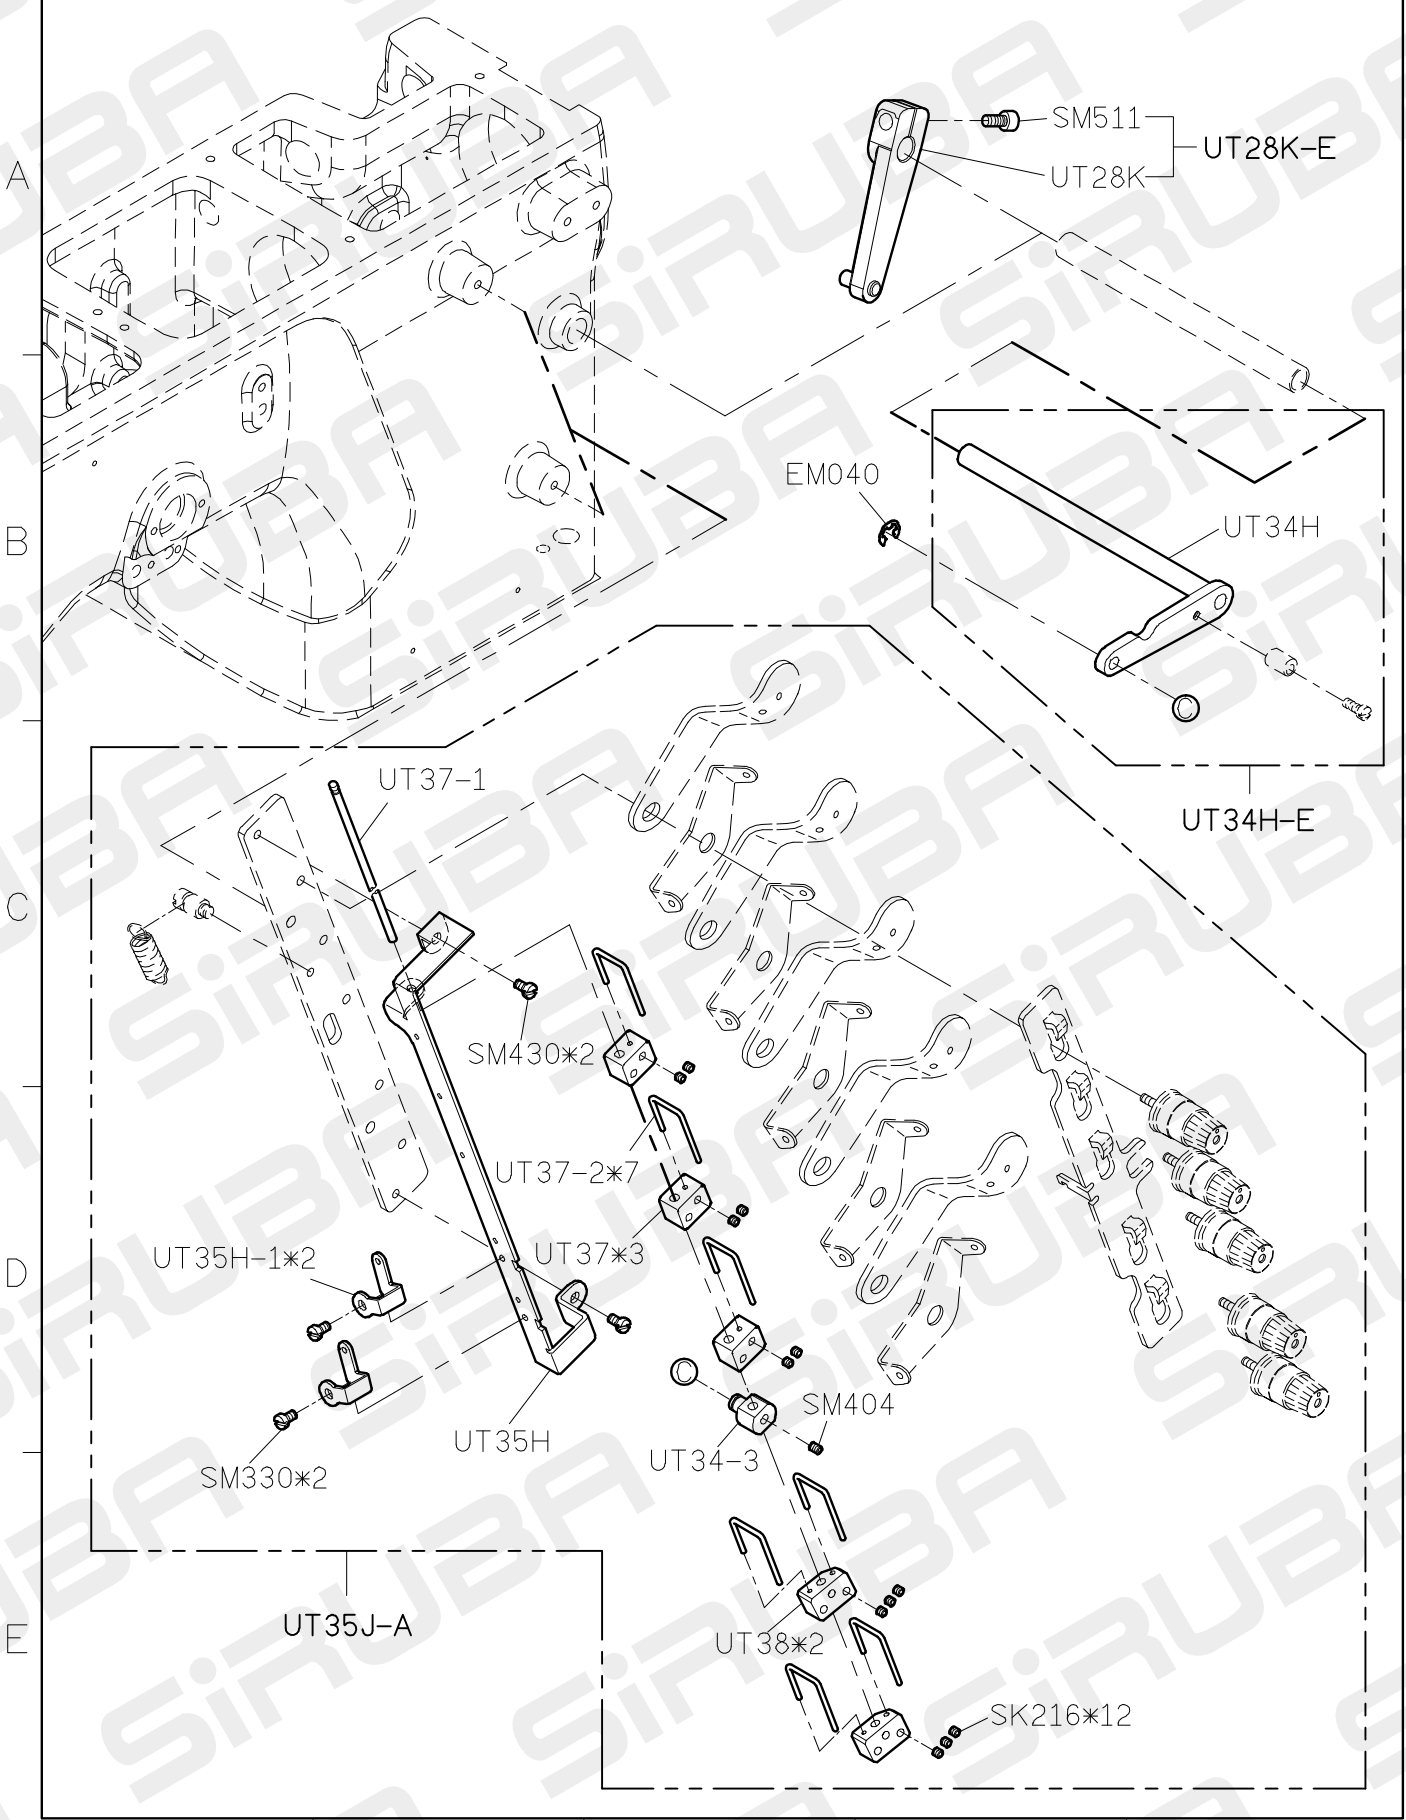

1 FOR F007K/F007KD/F858K/F858KD

2

3

4

5 09/12/01

F007K PARTS LIST FOR UTH-K GROUP P.7

A

 
B

C


D

E

FOR LEFT SIDE

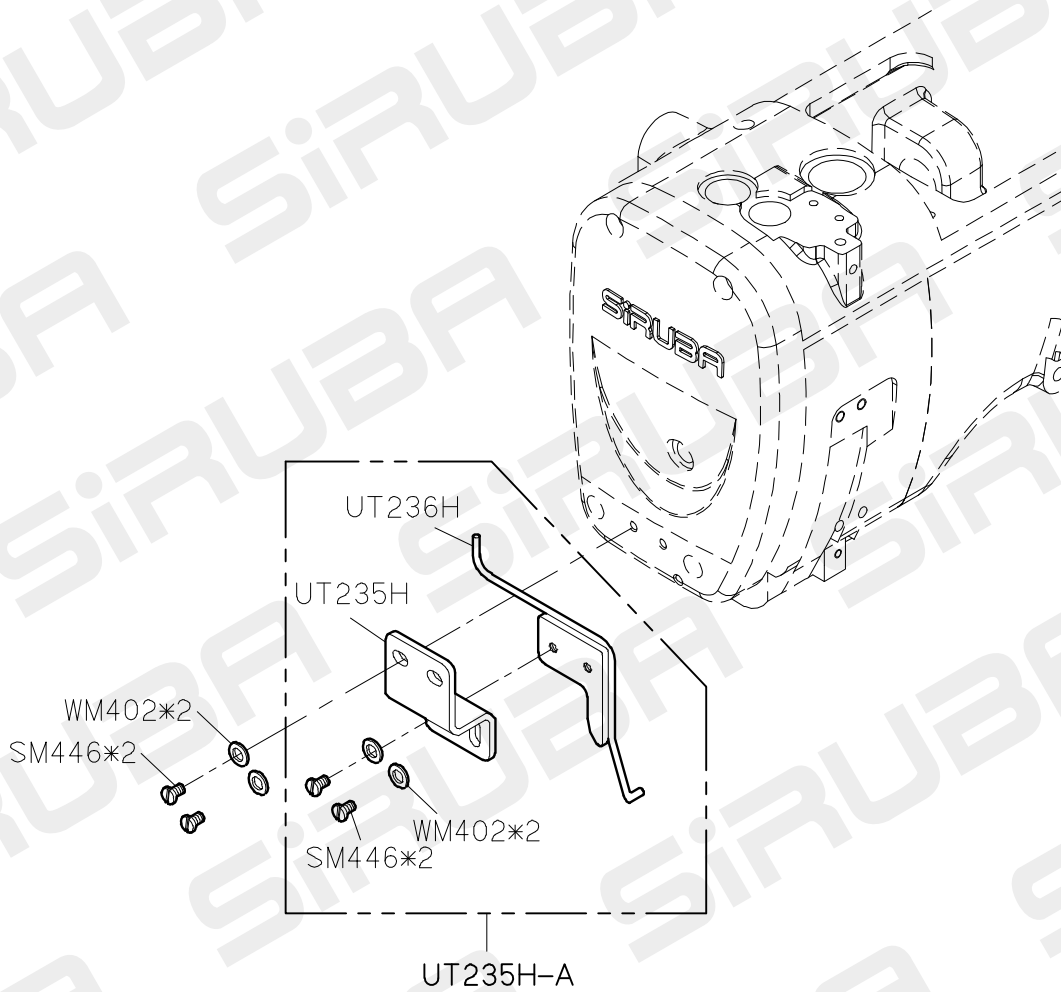


F007K PARTS LIST FOR UTG-K GROUP P.8

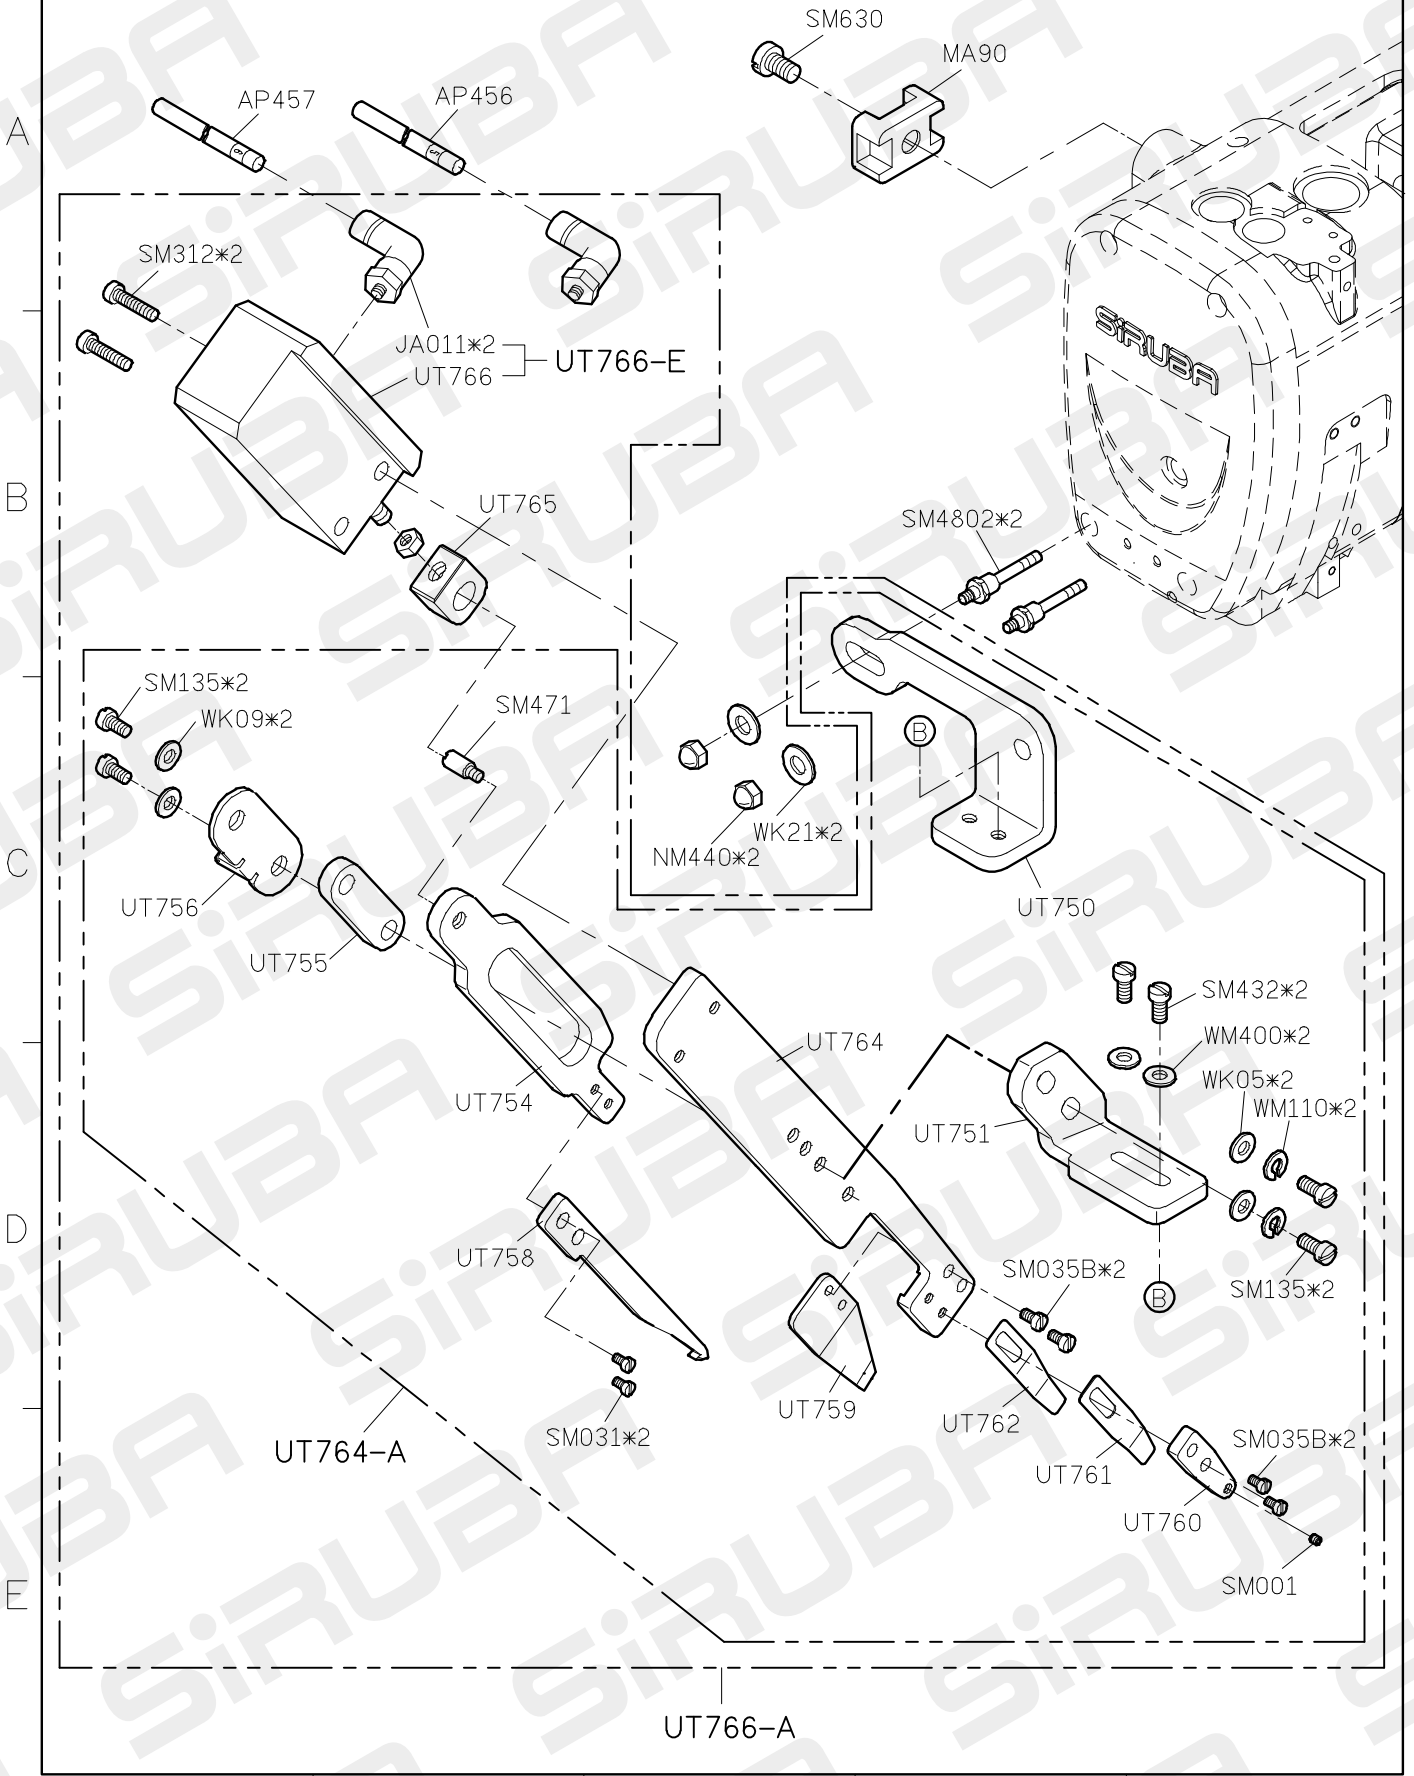 


1 FOR F007K/F007KD/F858K/F858KD

 F007K PARTS LIST FOR UTG-K(UTH-K)GROUP P.9-1

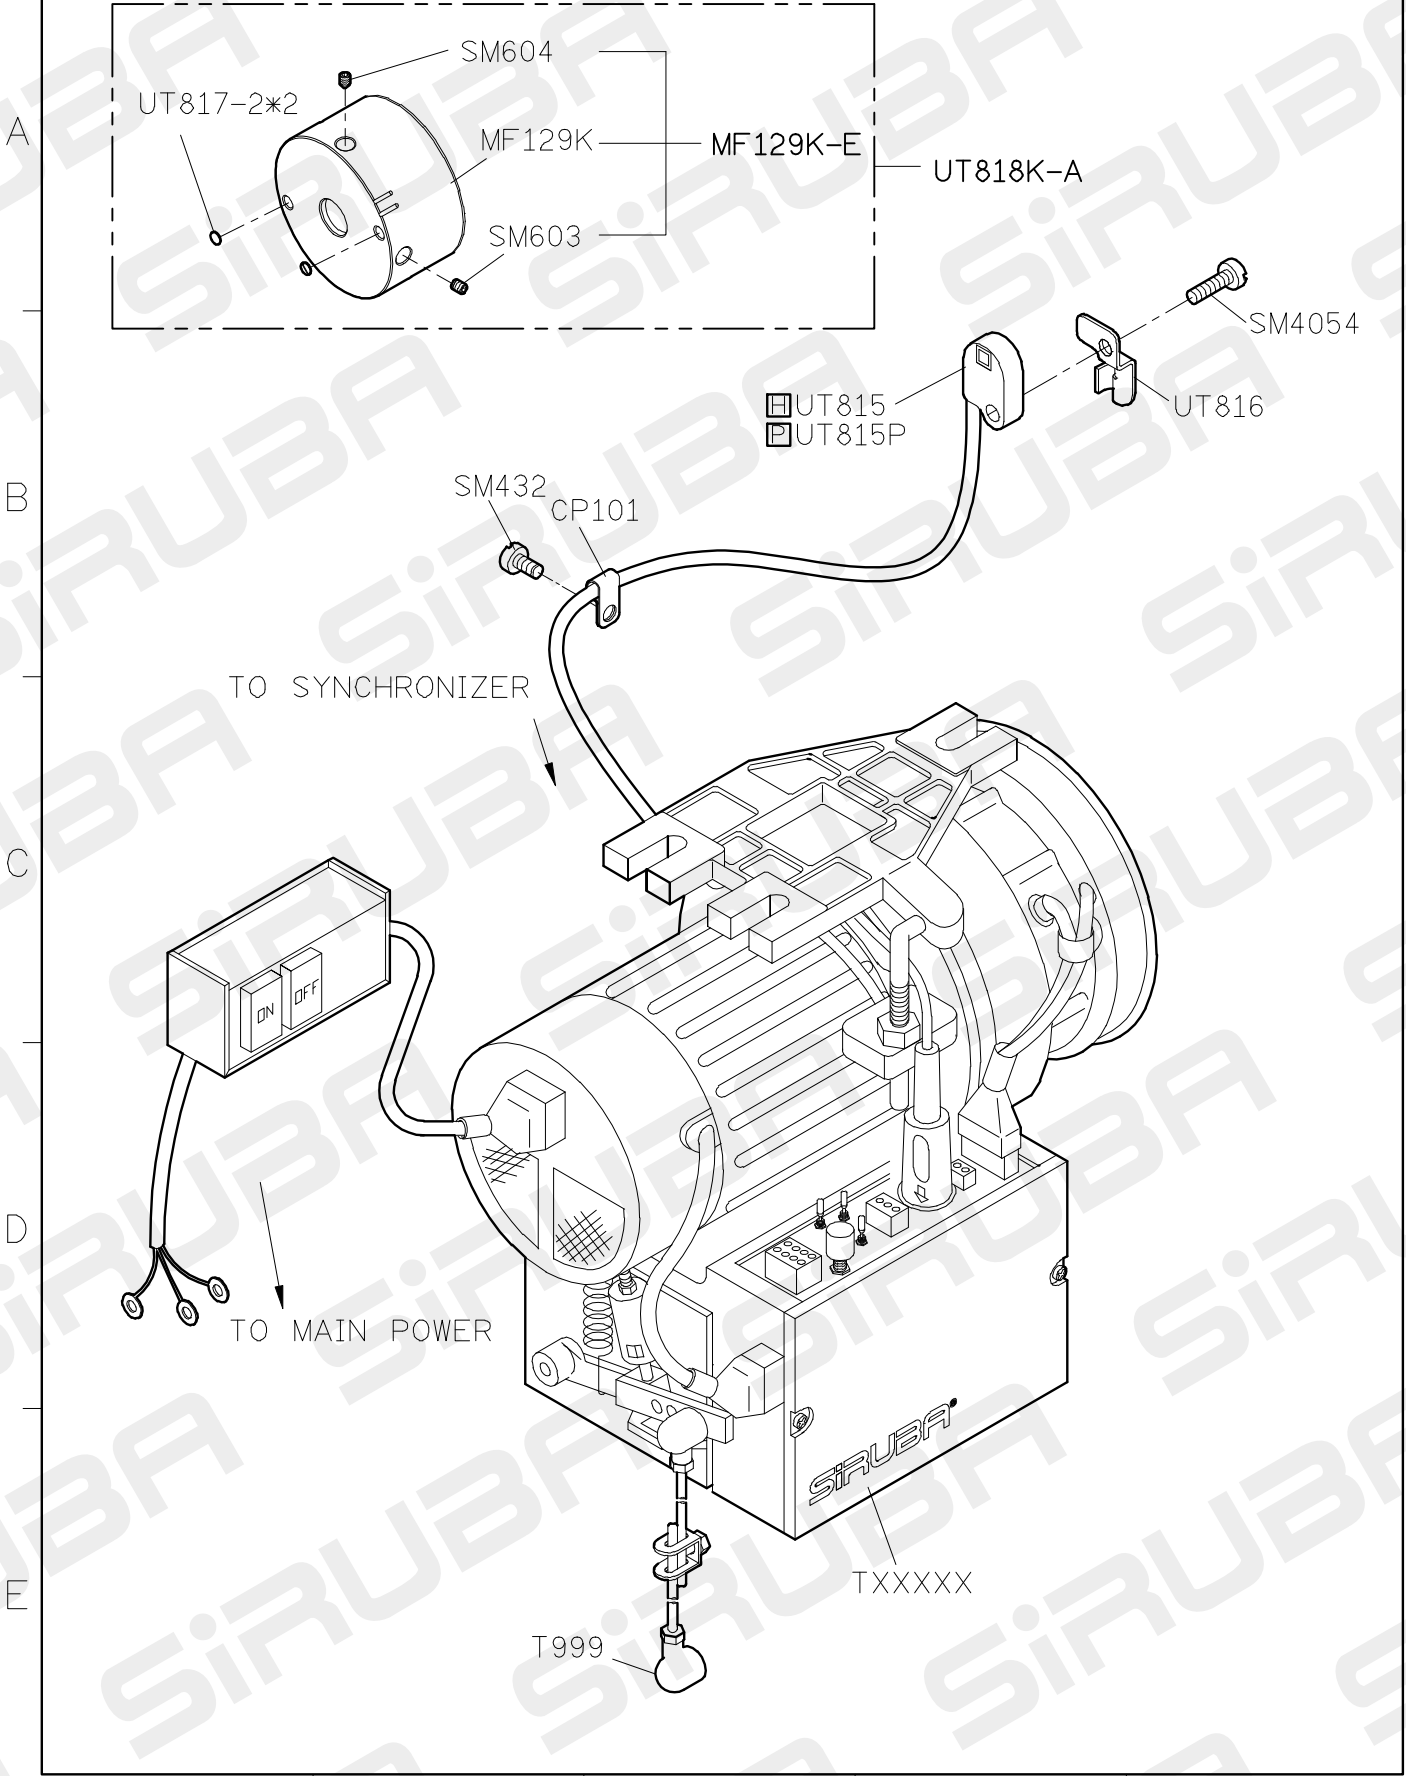

A
B
C
D
E

 F007K PARTS LIST FOR UTG-K(UTH-K)GROUP P.9-2

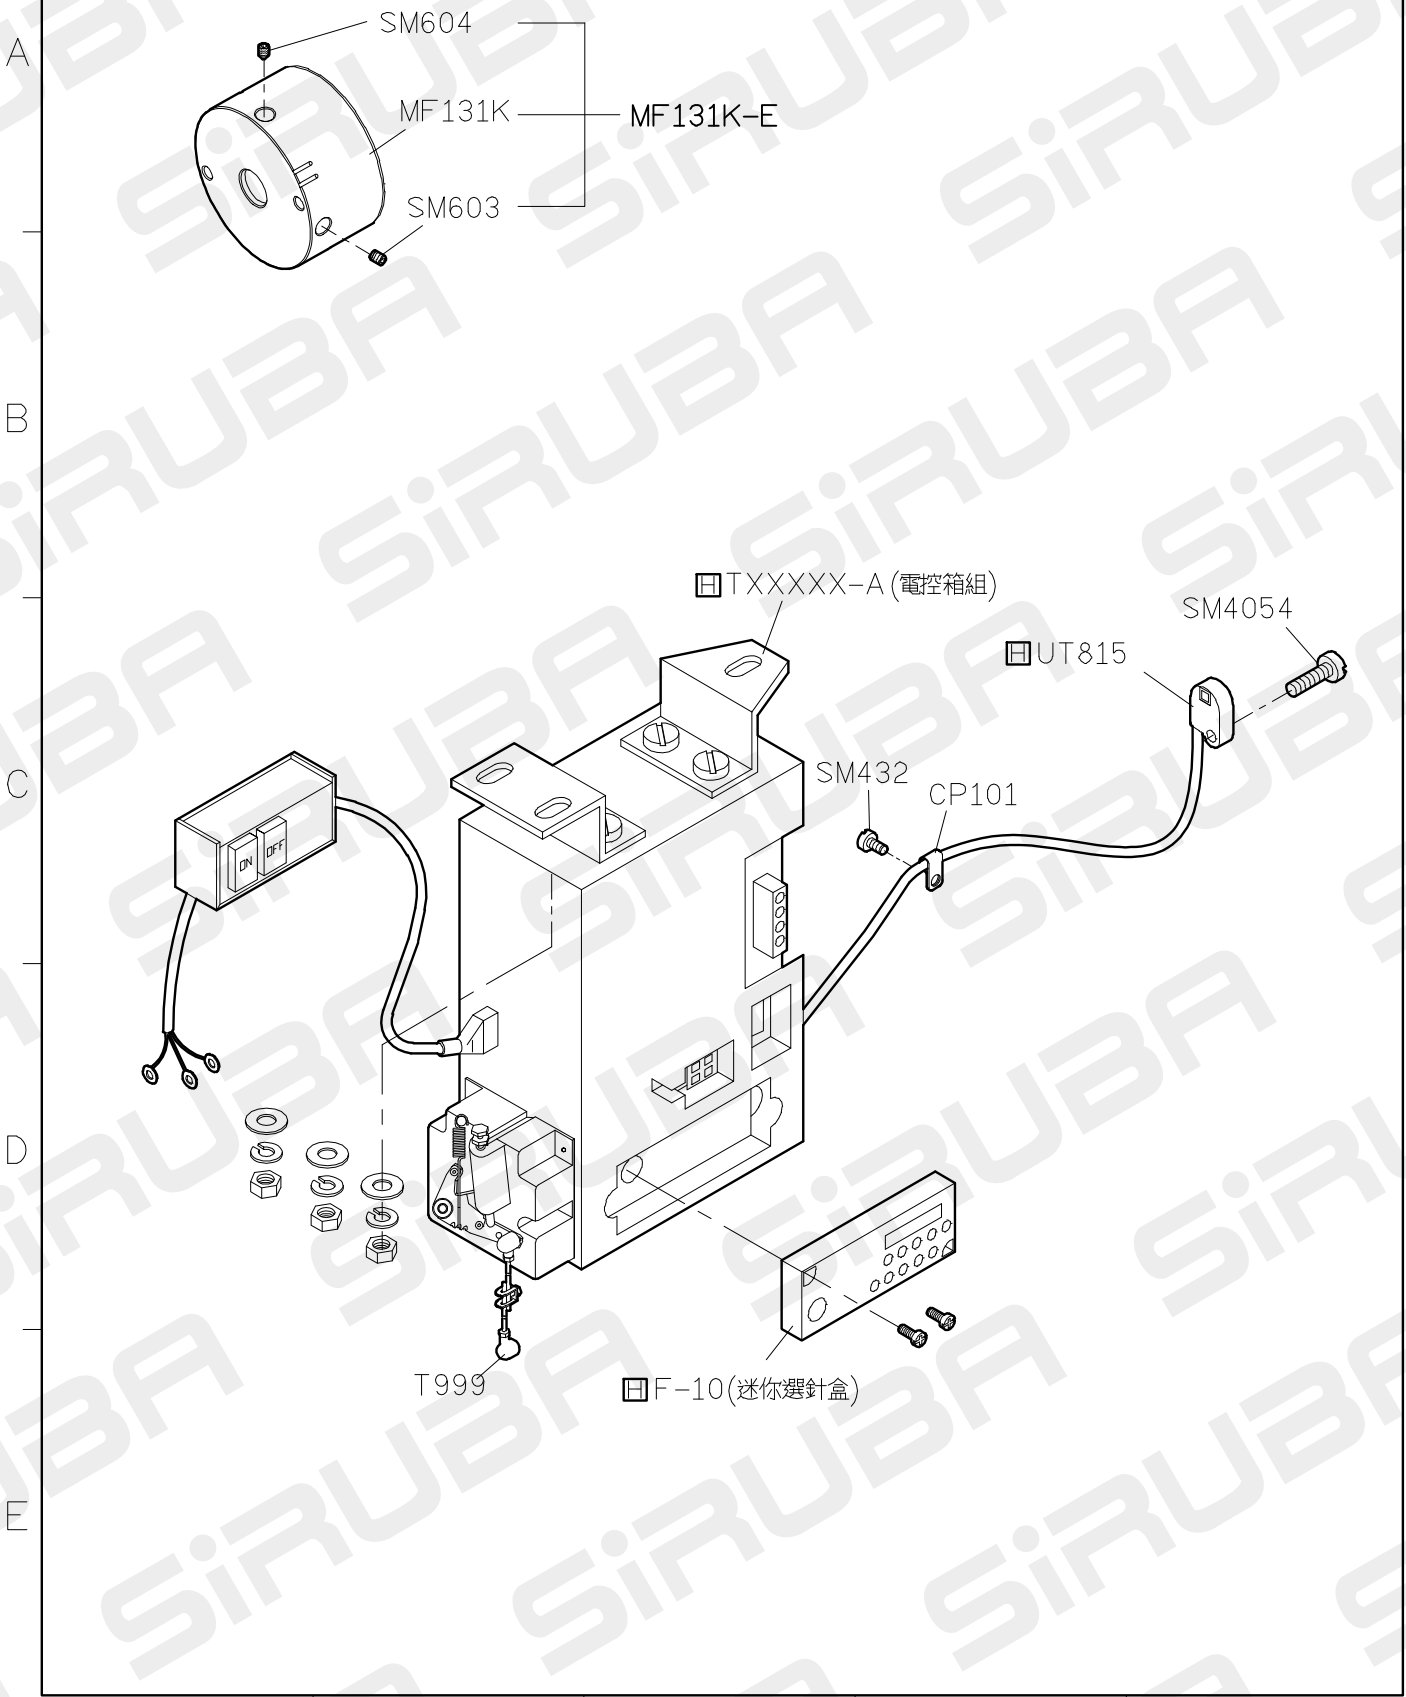


1 FOR F007KD/F858KD

2 FOR H牌馬達 (HVP-20)

4

5 10/11/11

 
F007K PARTS LIST FOR UTG-K(UTH-K)GROUP P.9-3

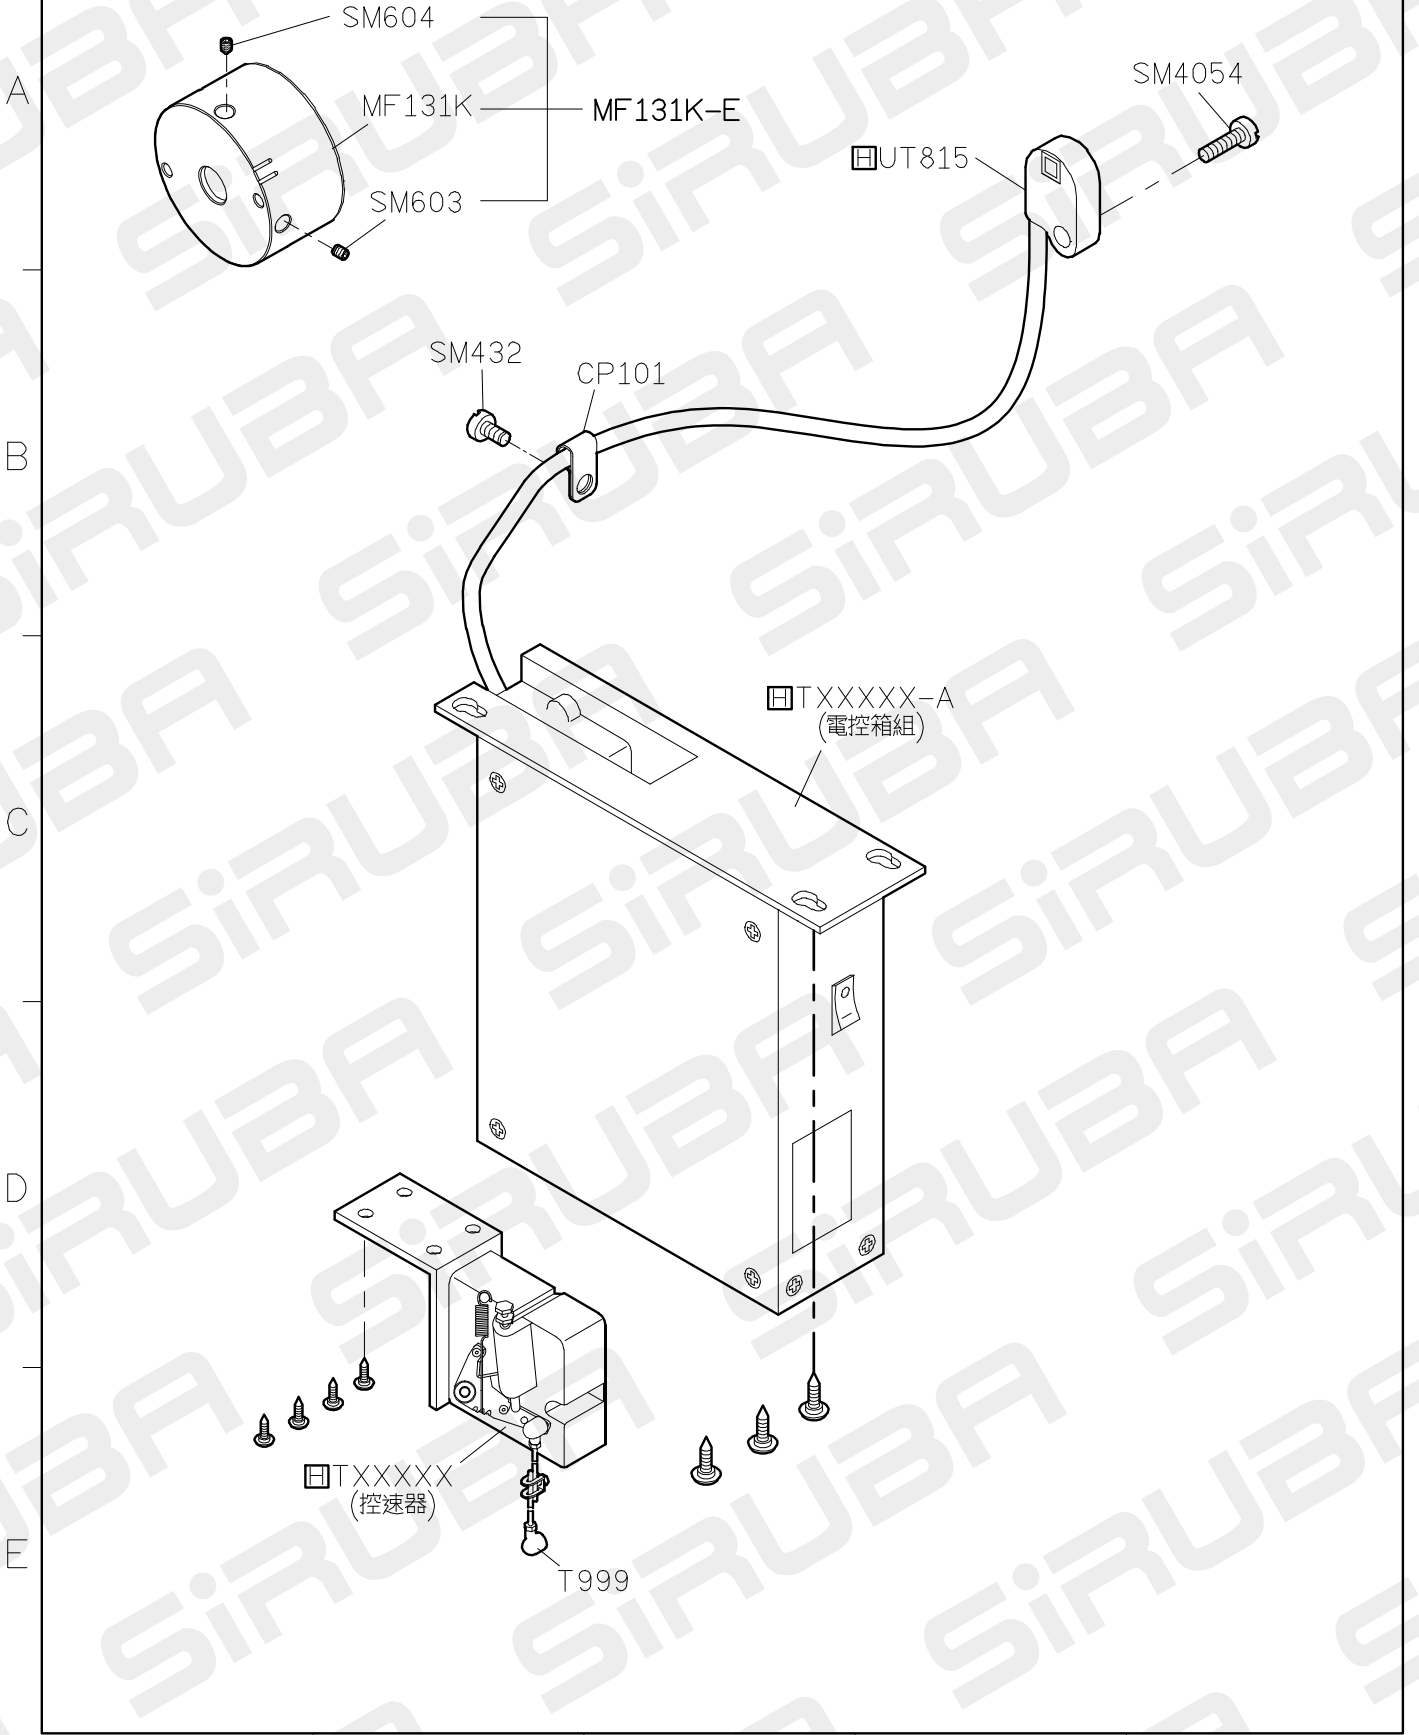

1 FOR F007KD/F858KD

2 FOR H牌馬達 (HVP-70)

 F007K PARTS LIST FOR UTG-K(UTH-K)GROUP P.9-4

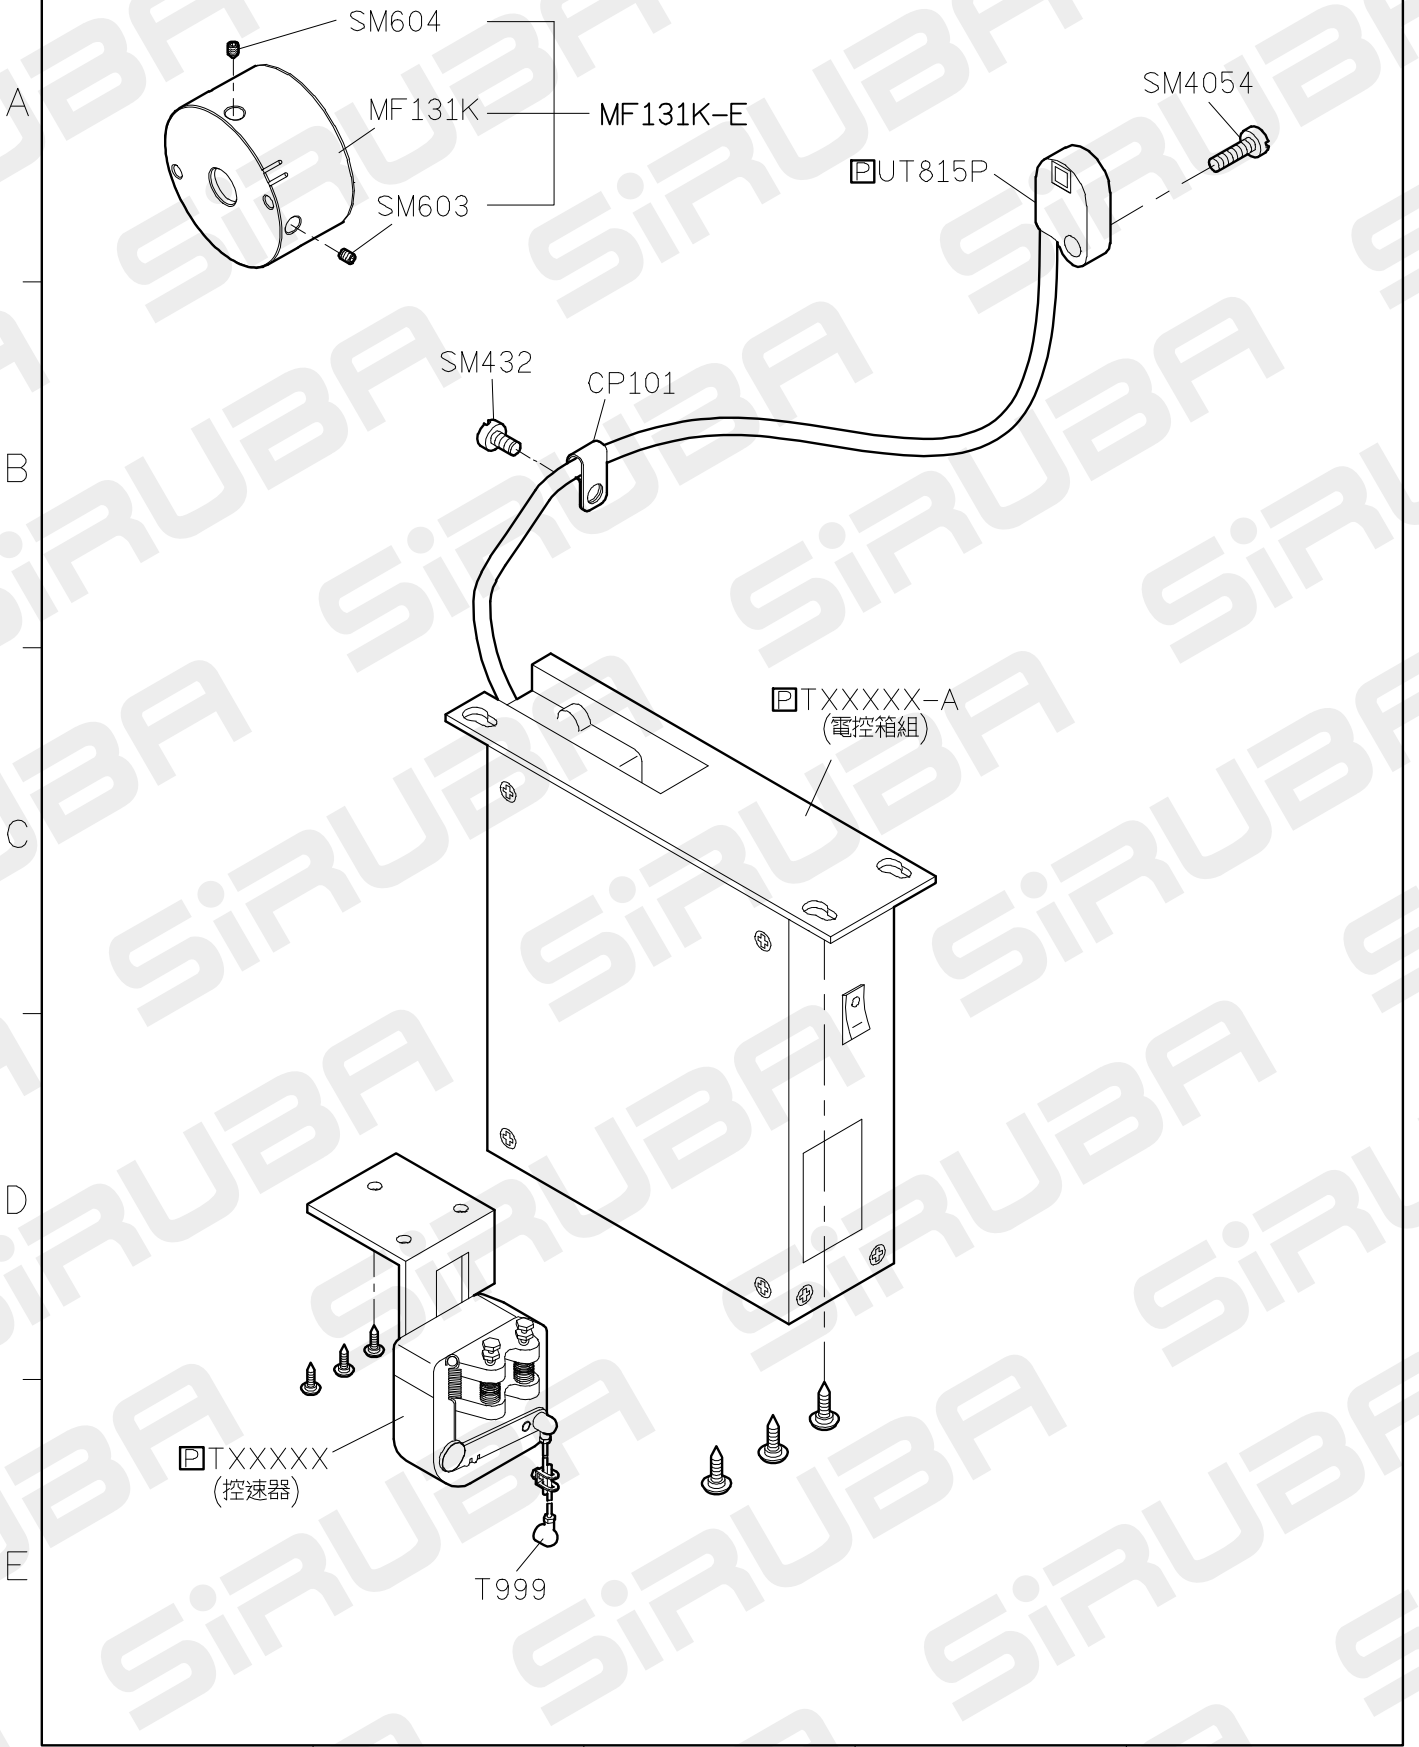

1 FOR F007KD/F858KD

2 FOR P牌馬達

3

4

5

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.1

UT302D-A

 
A

B


C

D

E

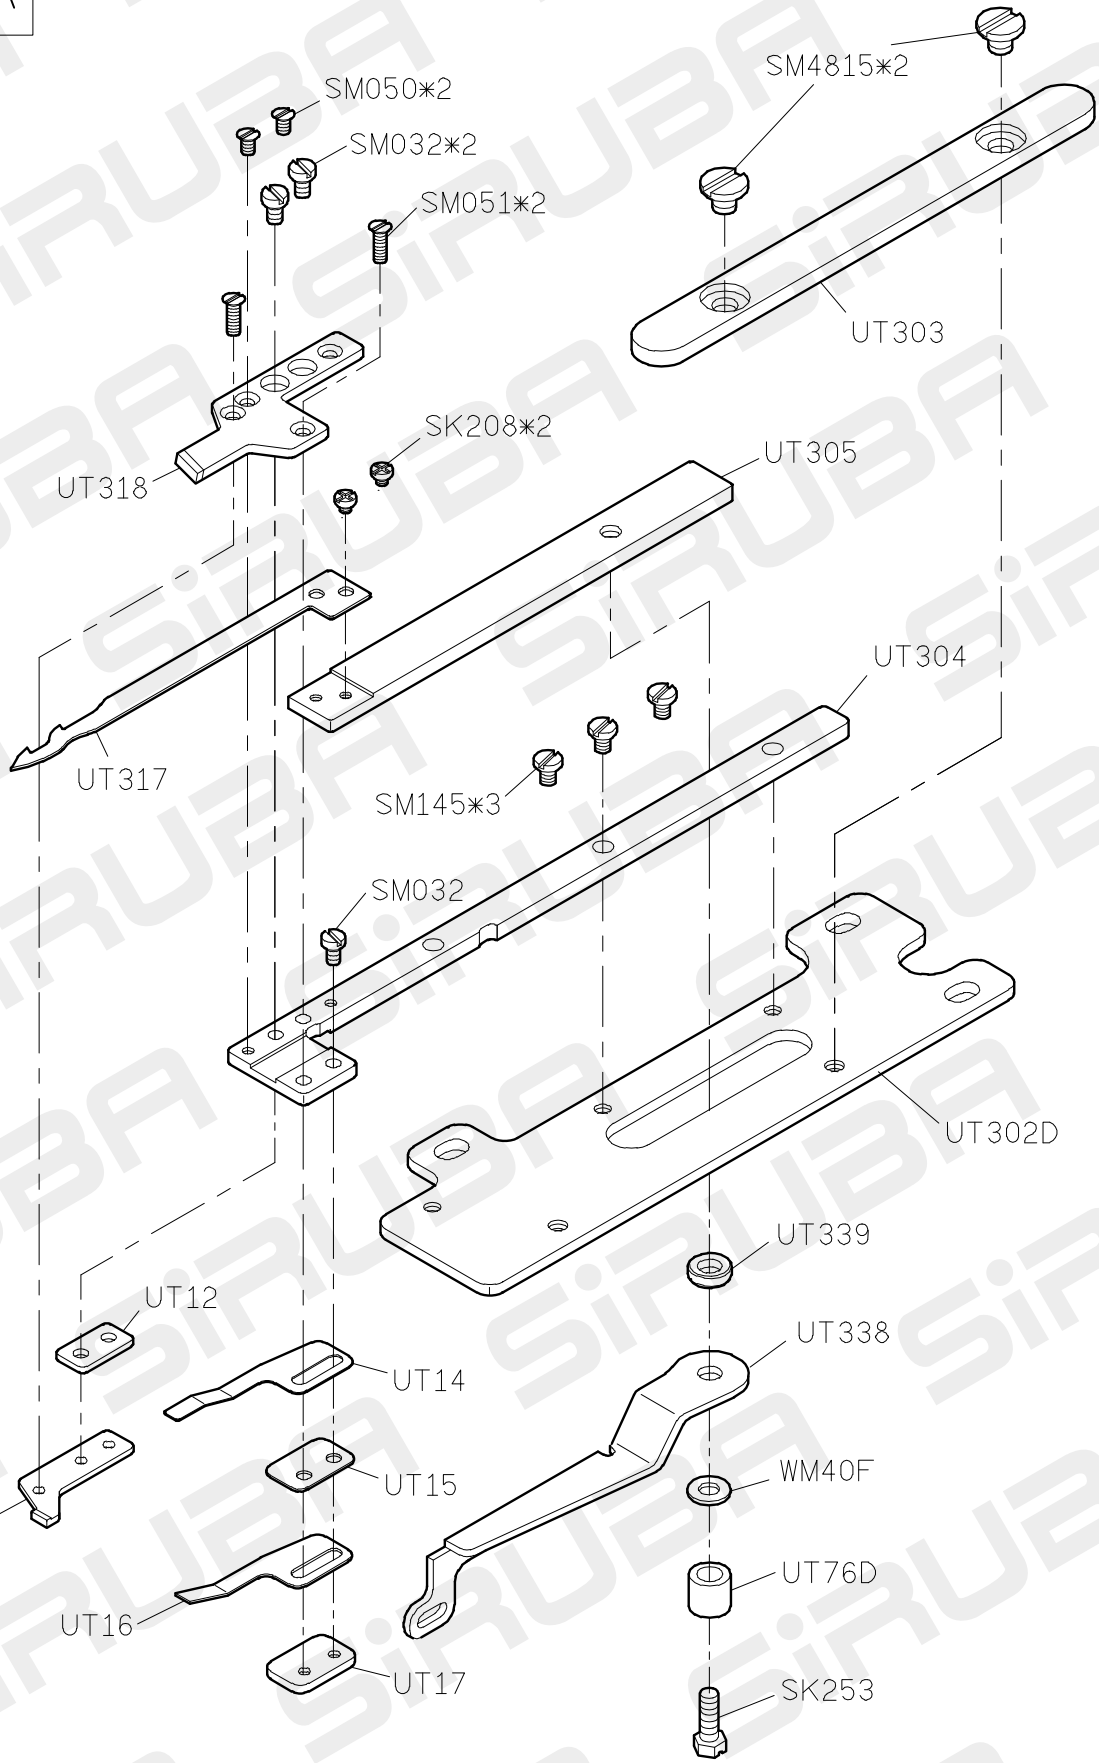

 F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.2

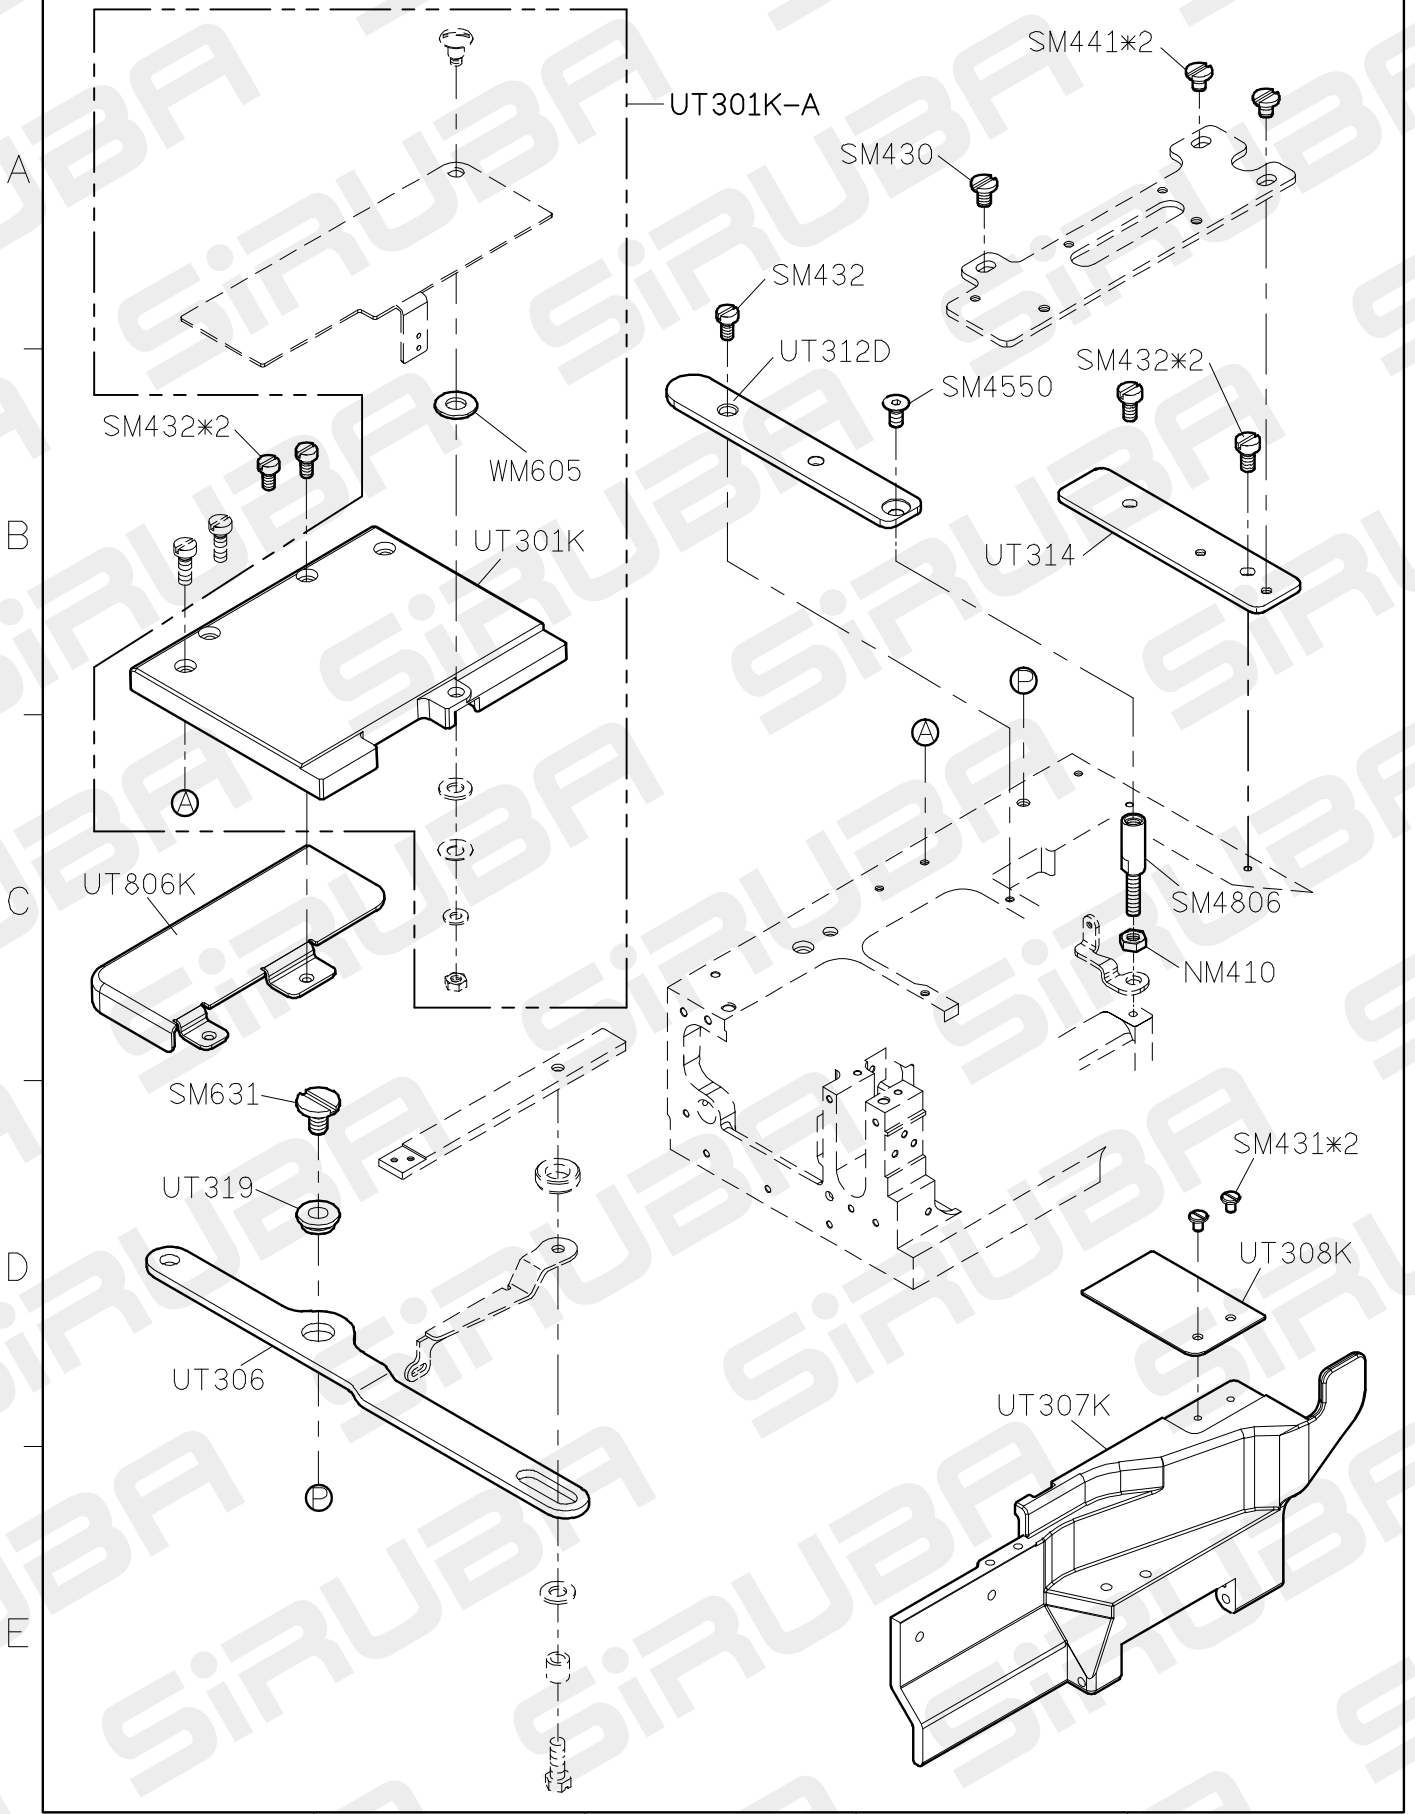

1 FOR F007K/F007KD/F858K/F858KD

 
3

4

5

10/11/15

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.3

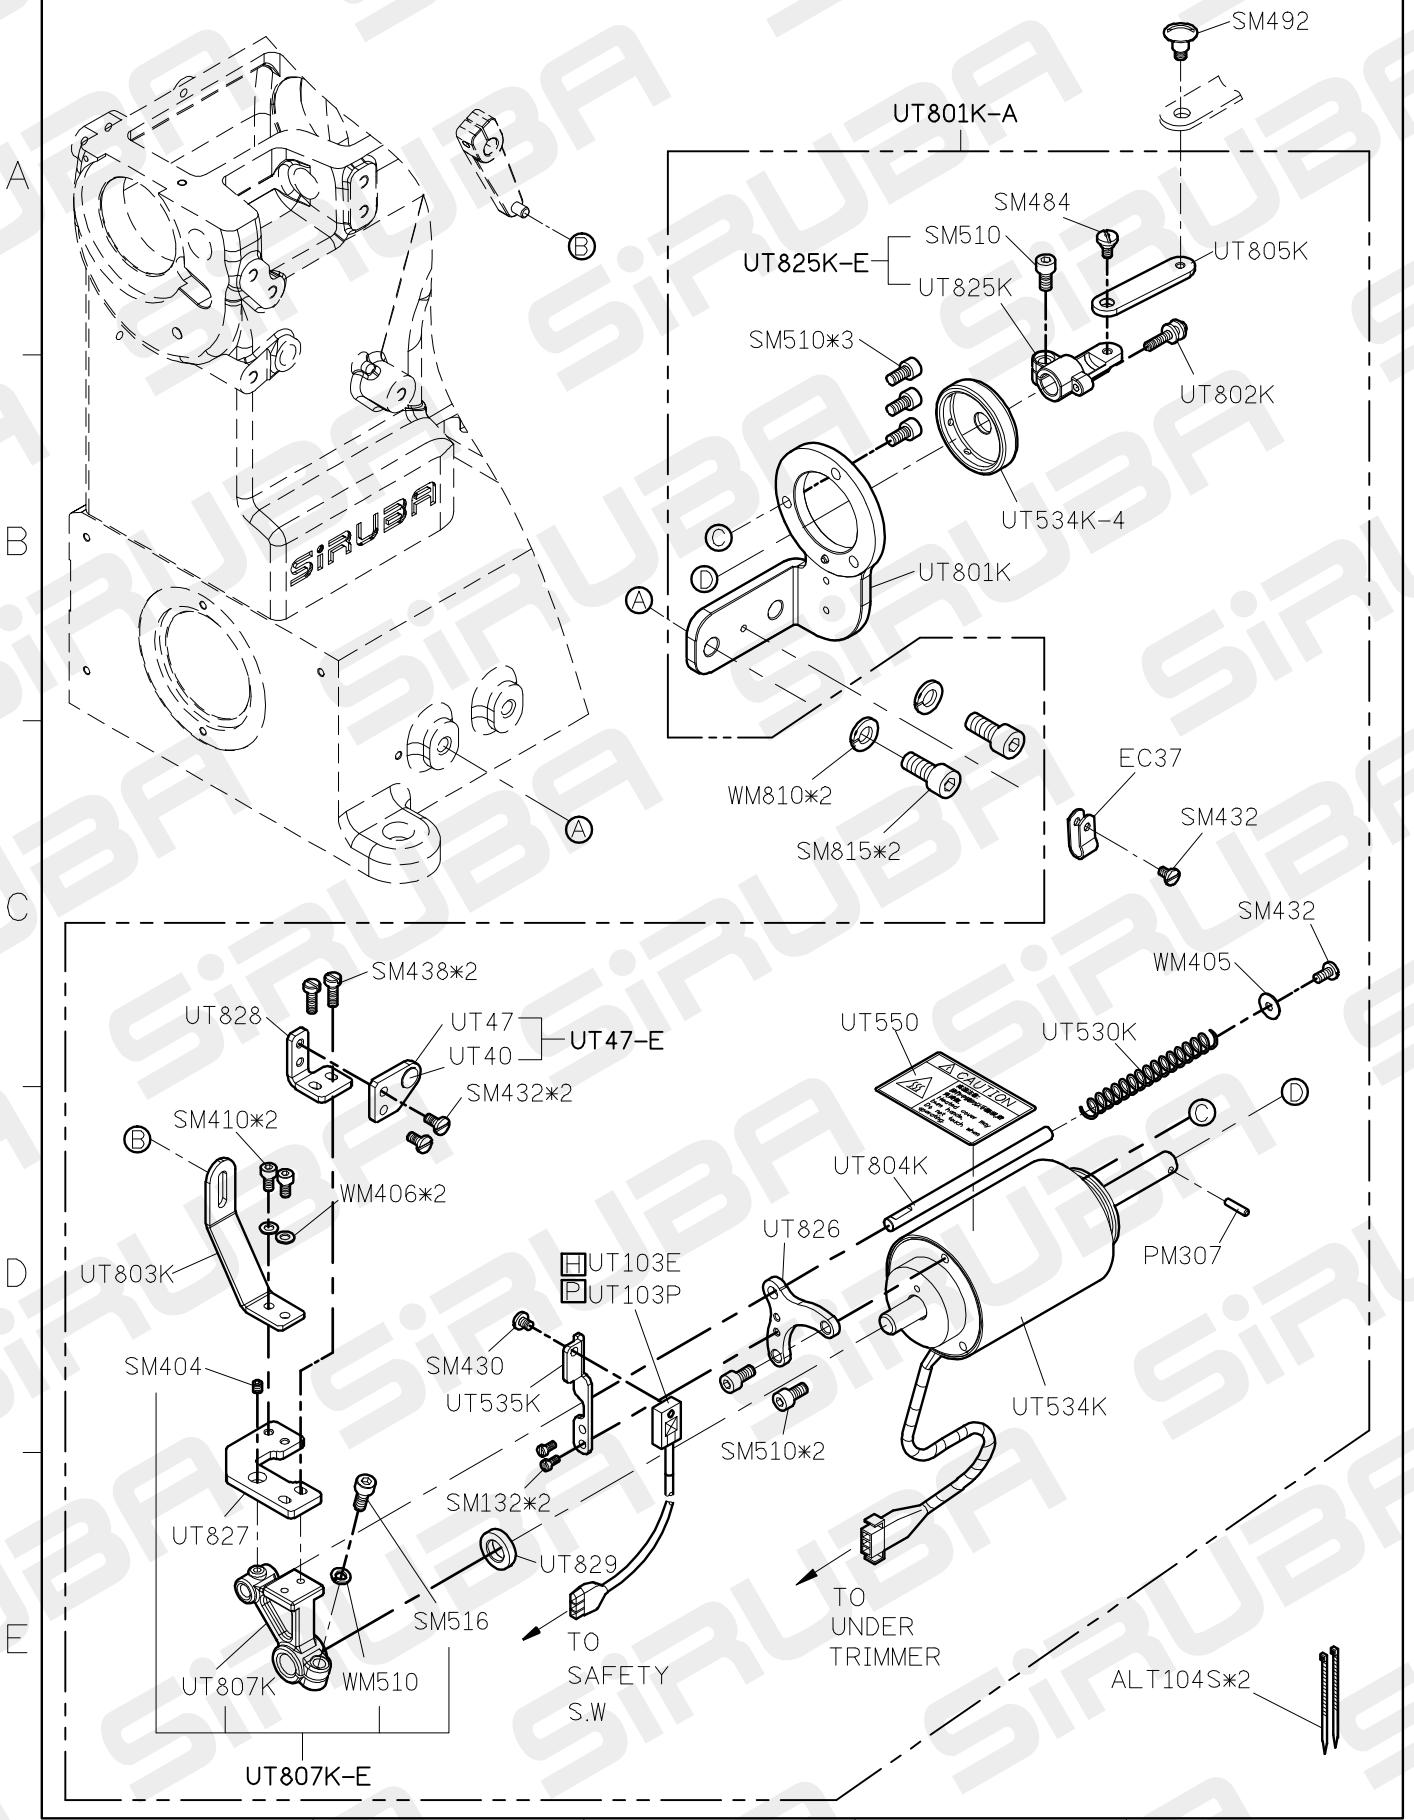

1 FOR F007K/F007KD/F858K/F858K

2

3

 
 
 
FOR H牌馬達
 FOR P牌馬達

4 5 10/09/30


F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.4

A
B
C
D
E

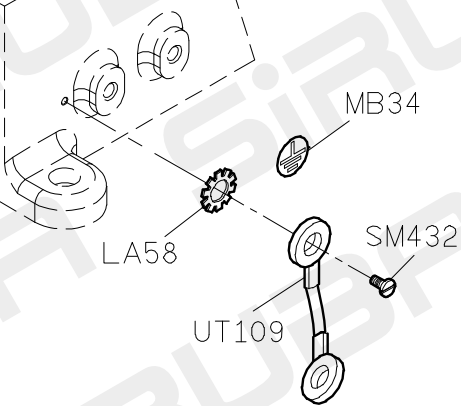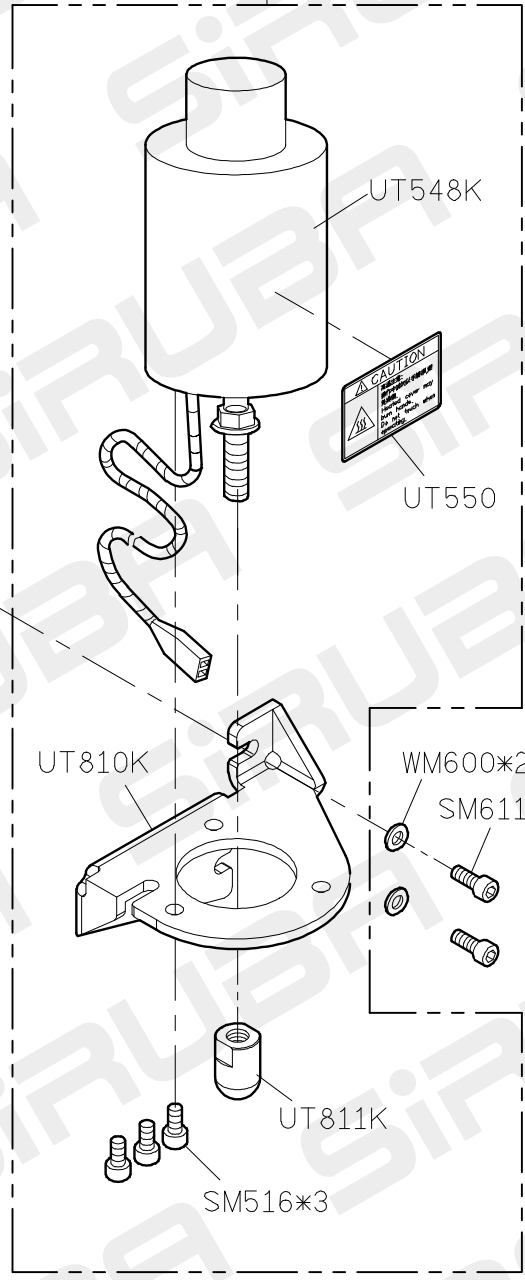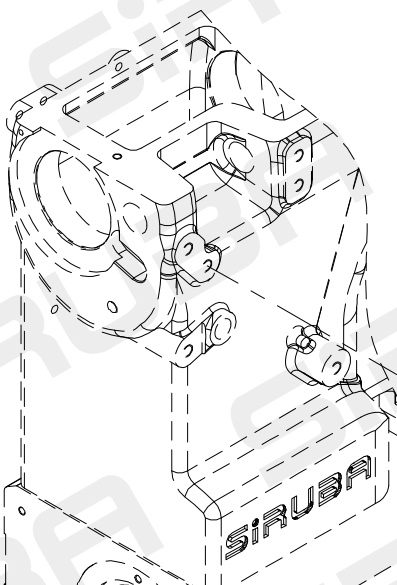

UT810K-A

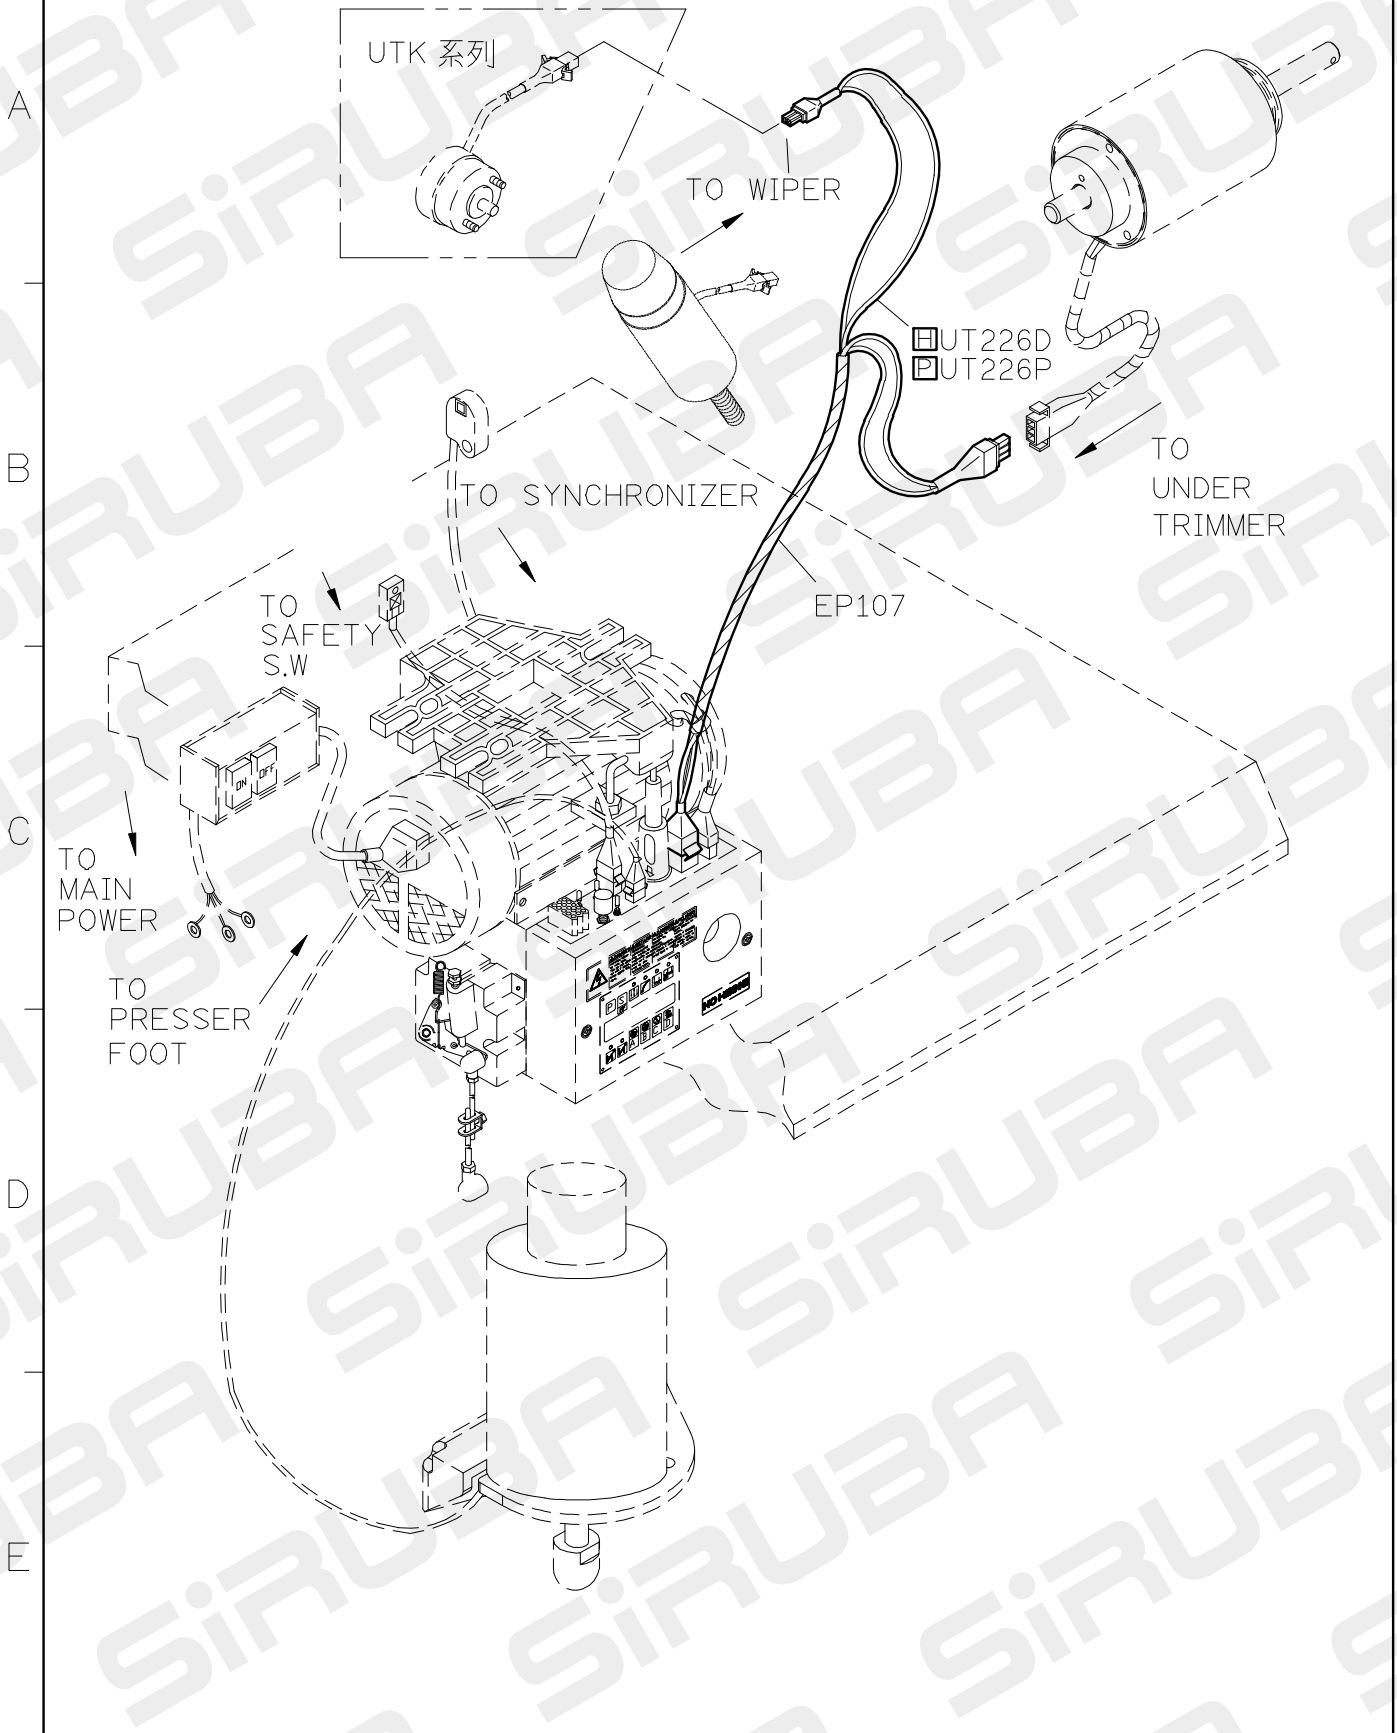 

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.5-1



1 FOR F007K/F858K

2  FOR H牌馬達
 FOR P牌馬達

3

4

5

09/12/01

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.5-2

 
A

B

C

D

E

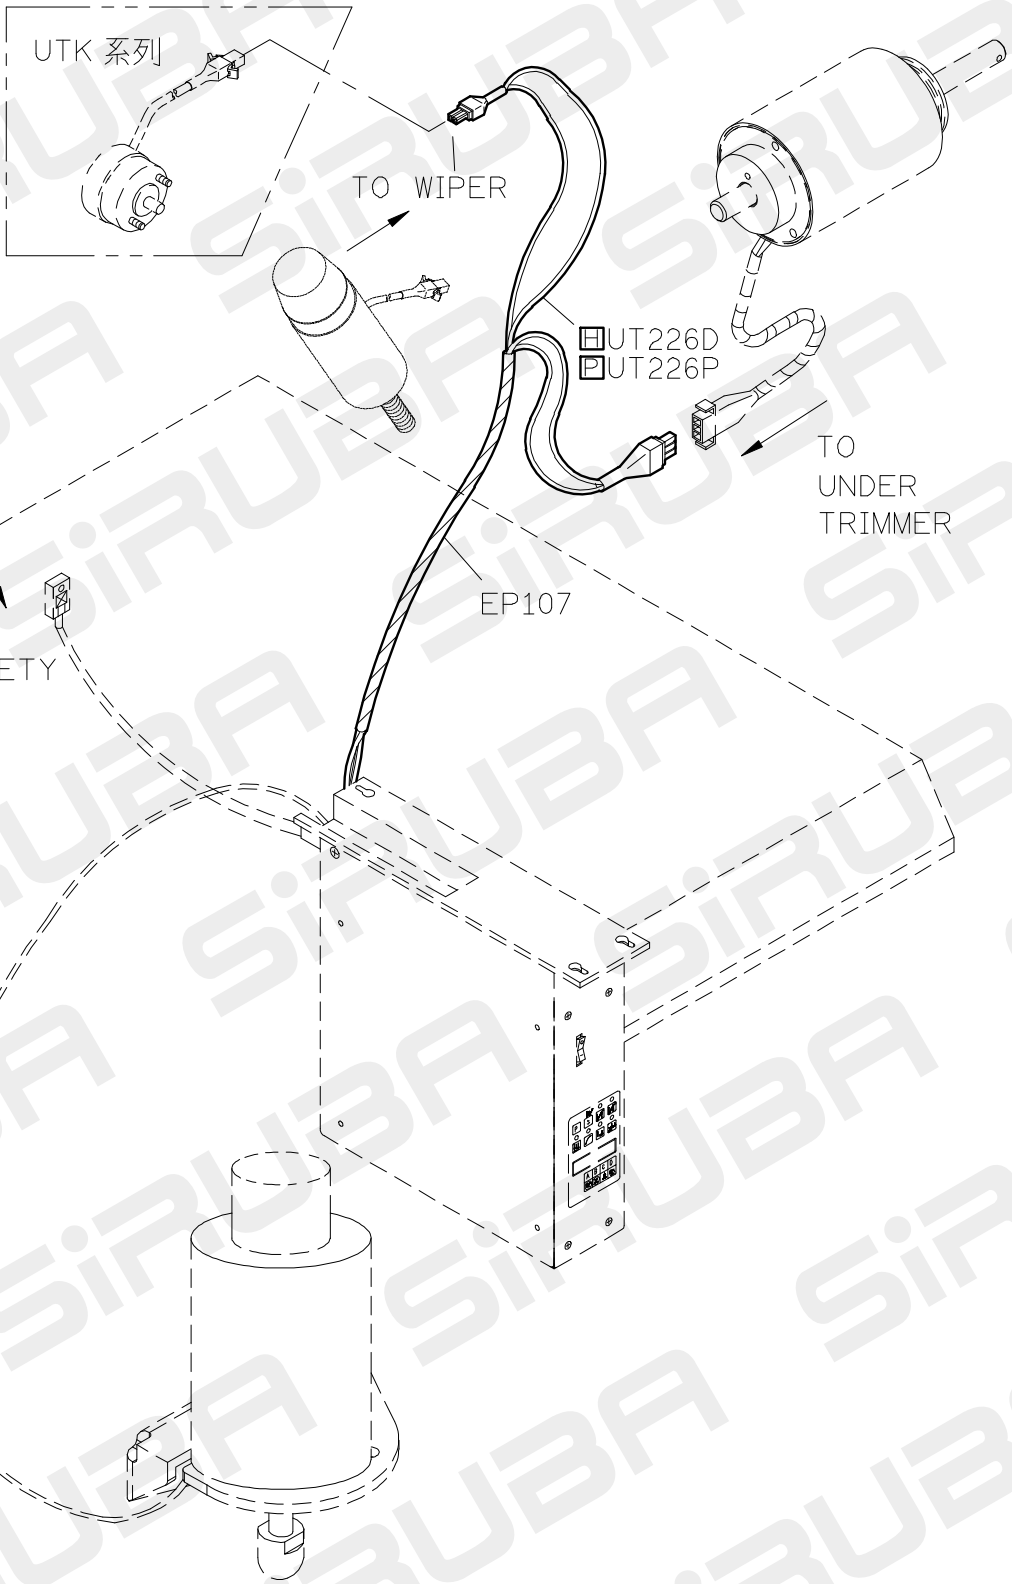

1 FOR F007KD/F858KD

2 FOR H牌馬達 (HVP-70)
 FOR P牌馬達

5 09/12/01

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.5-3

 
A

B

C

D

E

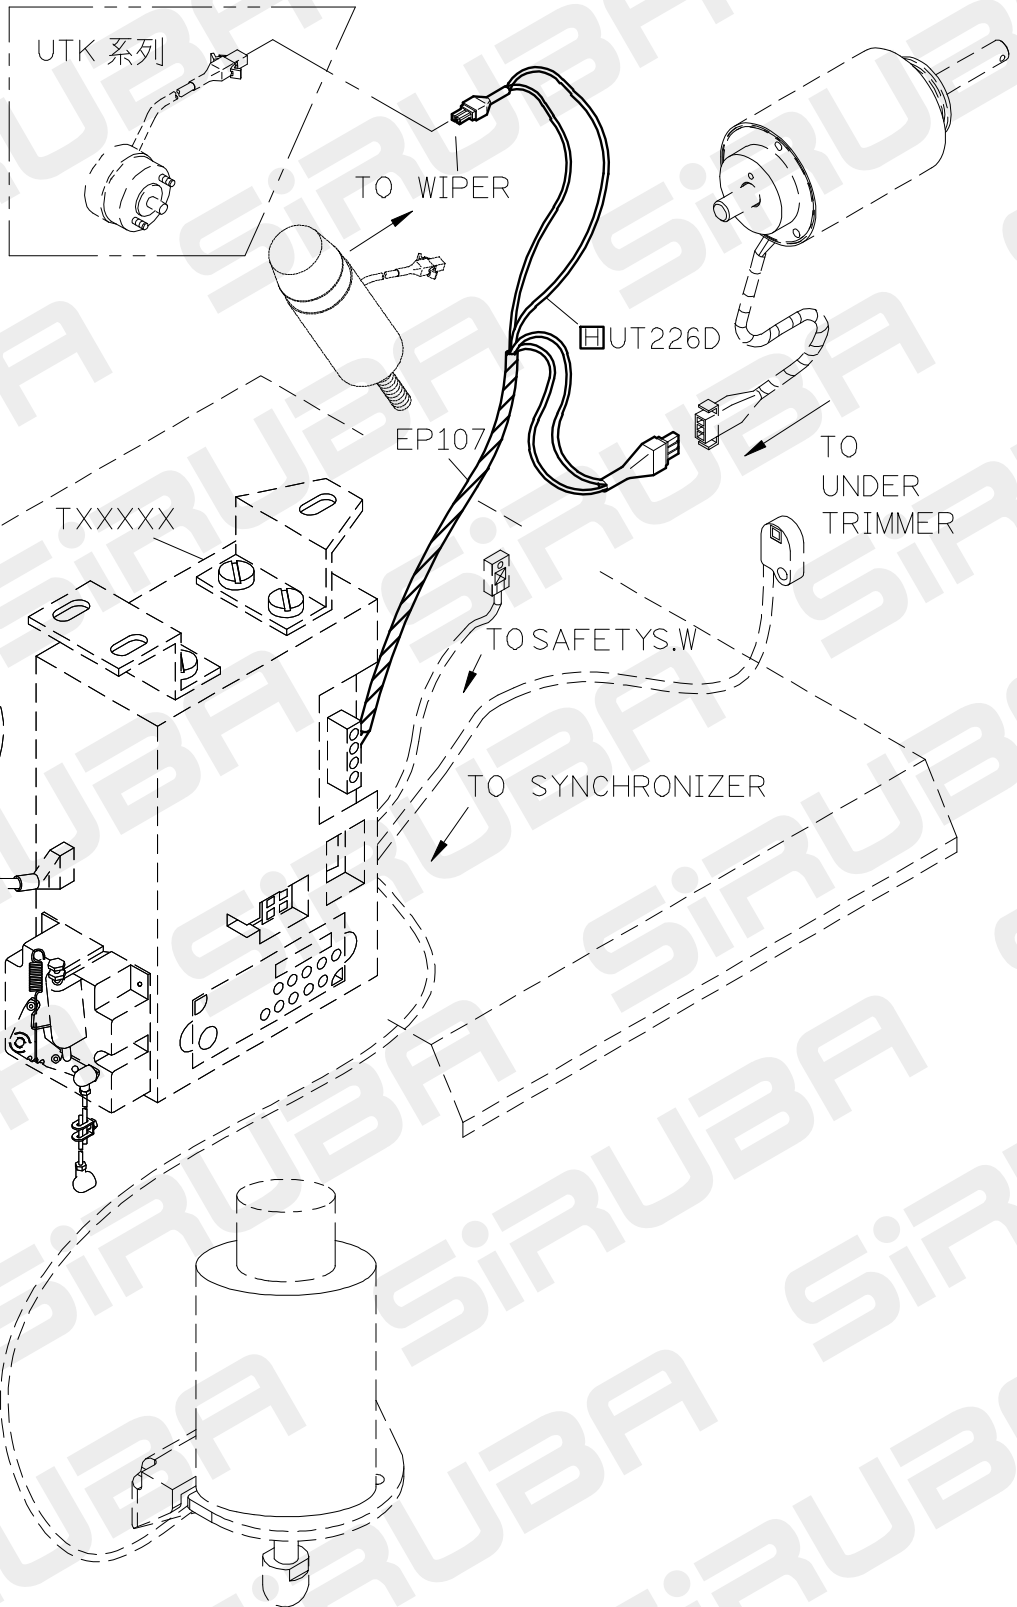

1 FOR F007KD/F858KD

 
2 FOR 牌馬達 (HVP-20)

3

4

5 09/12/01

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.6

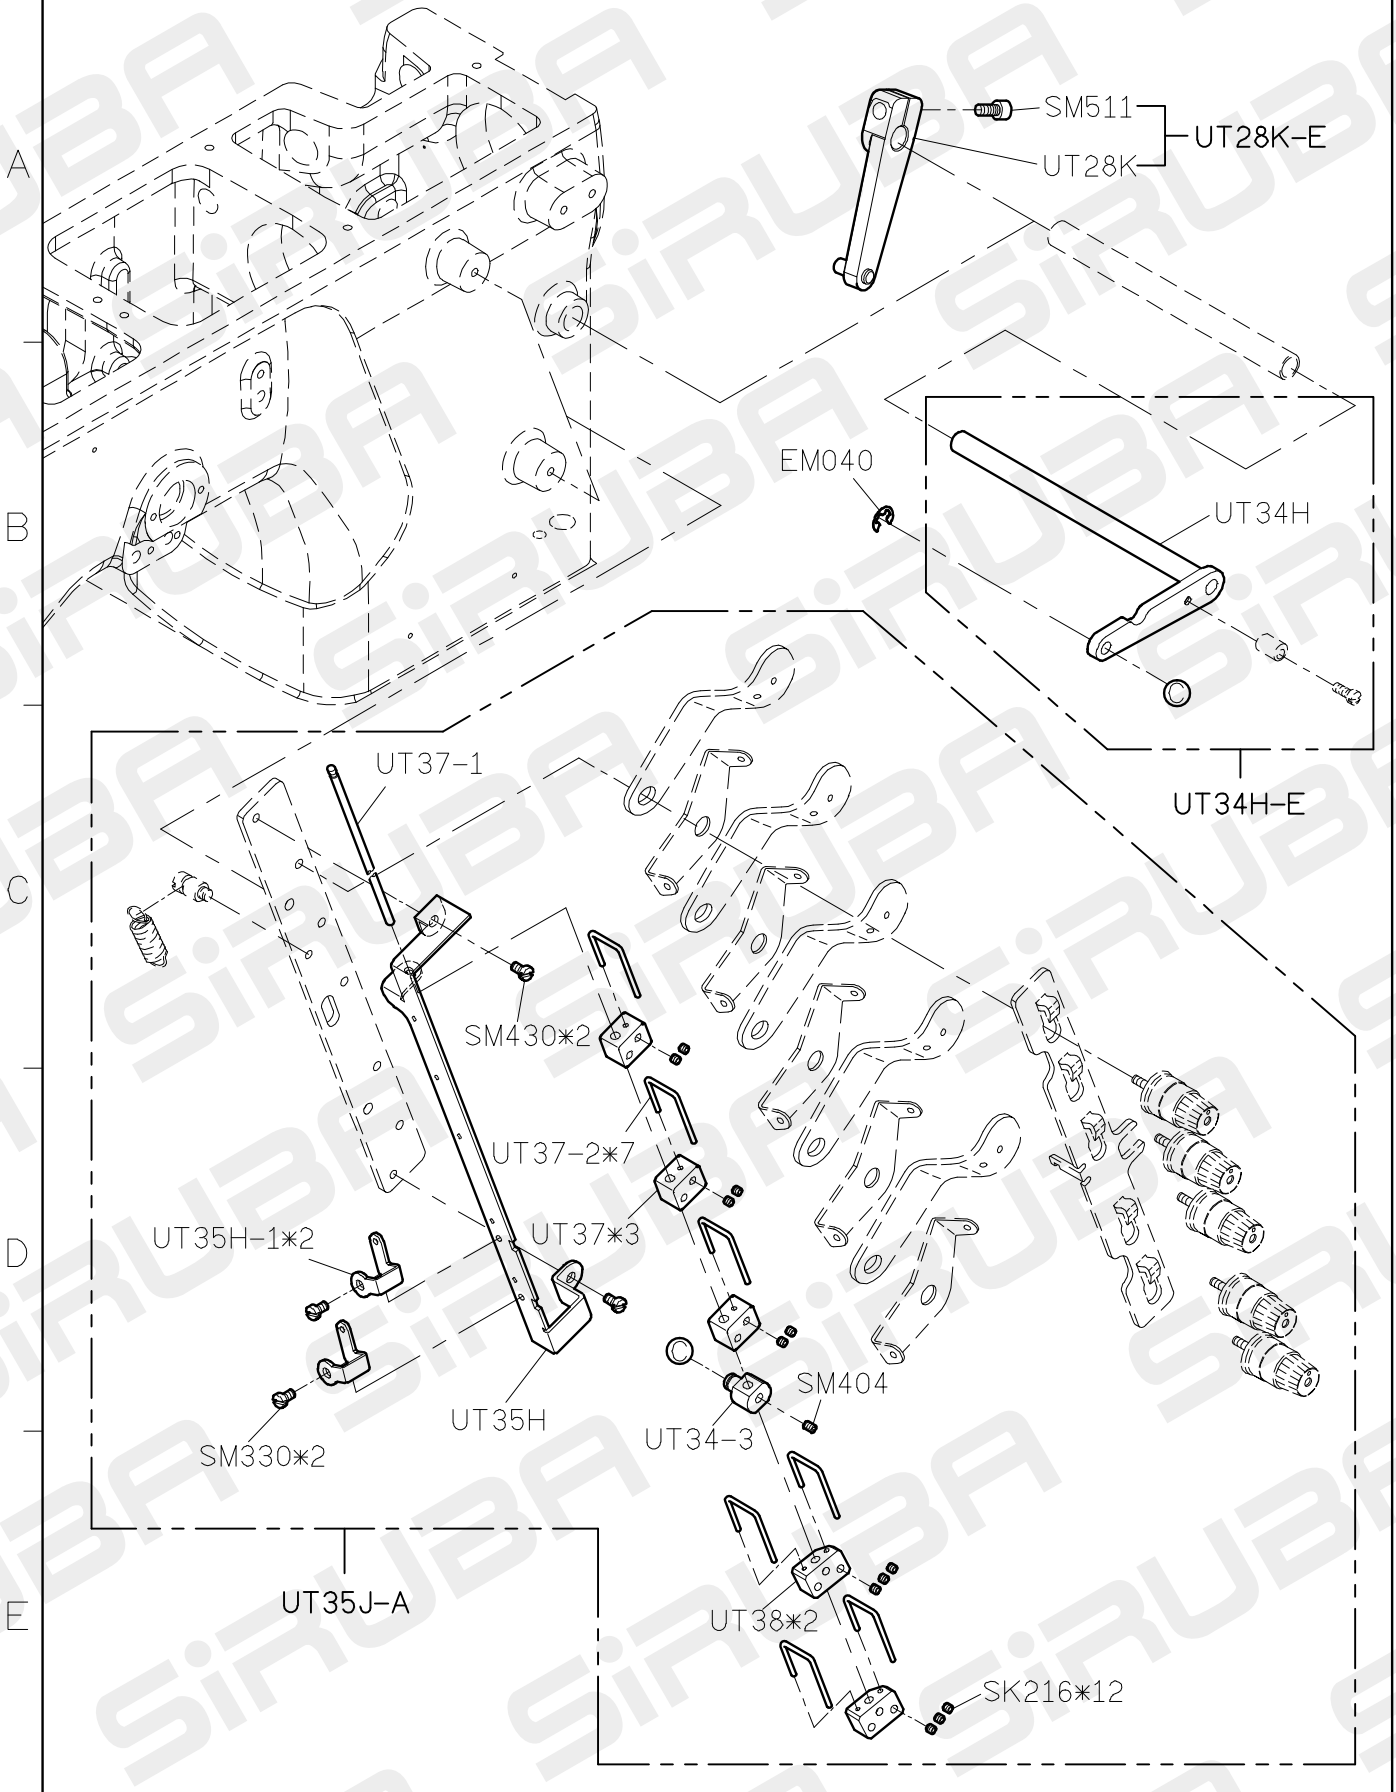


FOR F007K/F007KD/F858K/F858KD

09/12/01


F007K PARTS LIST FOR UTK-K GROUP P.7

 A

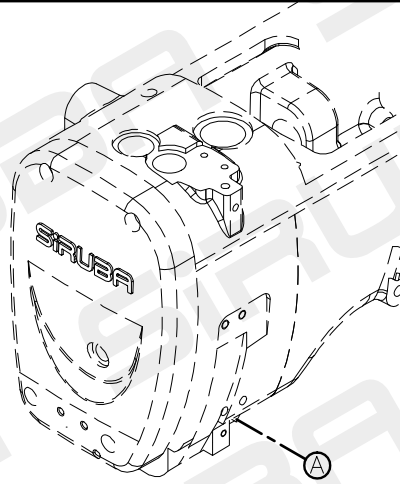

UT218J-A1

 B

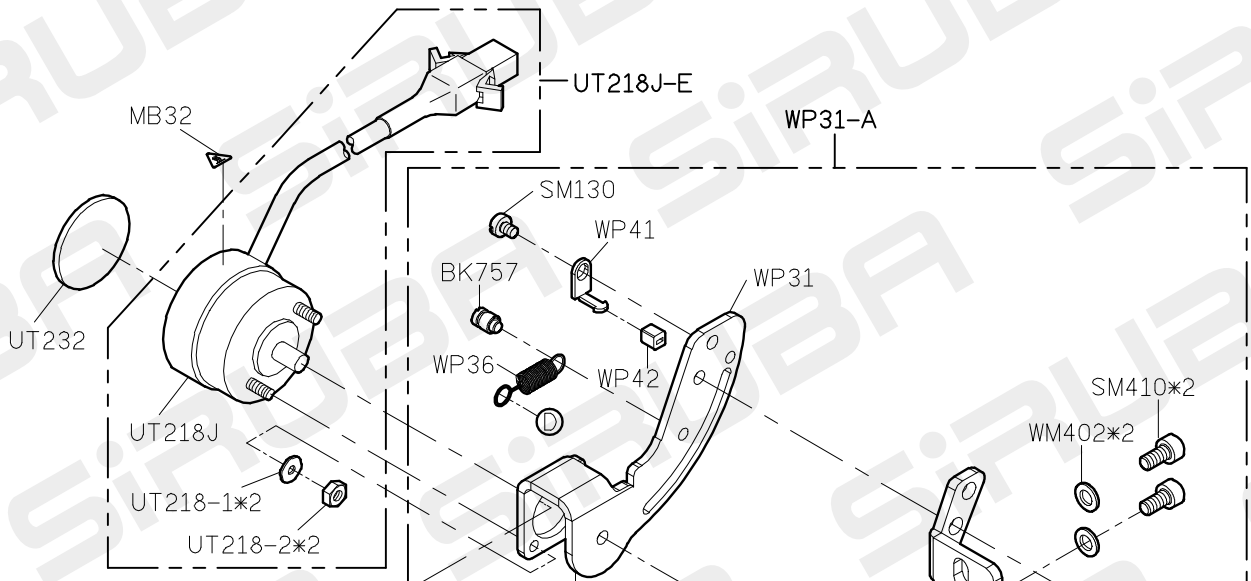

MB32

UT218J-E

WP31-A

UT232

UT218J

UT218-1*2

UT218-2*2

SM130

WP41

WP31

BK757

WP36


WP42

SM410*2

WM402*2

C

 D

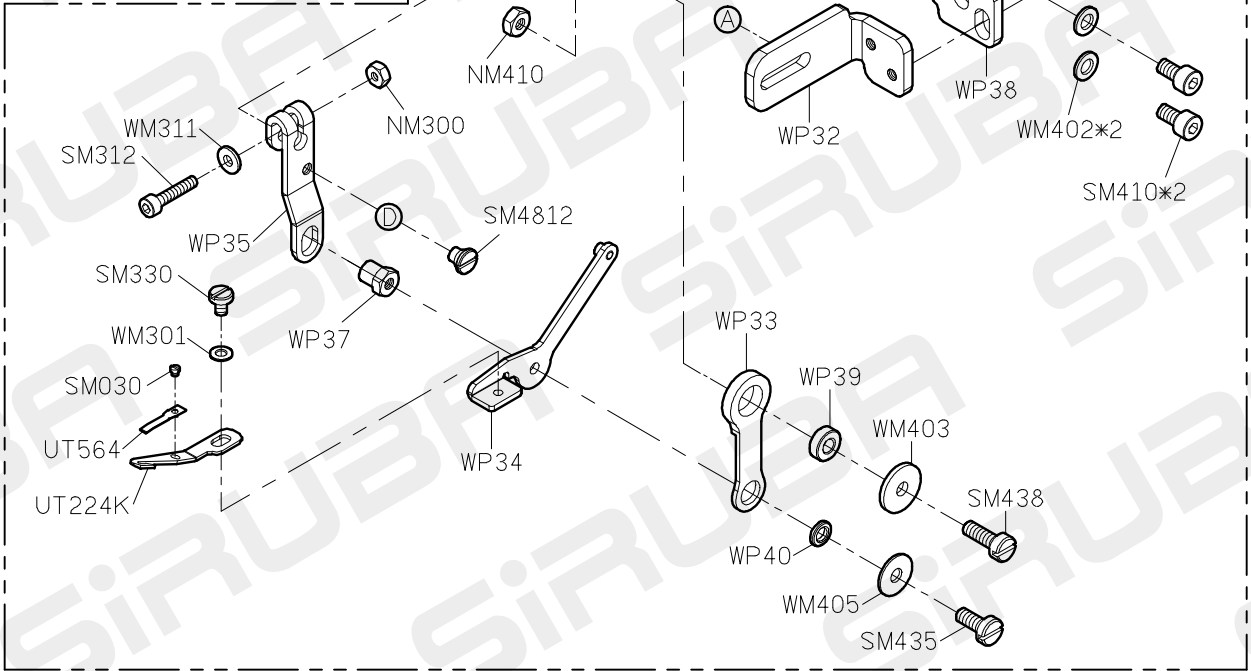

WM311

SM312

SM330

WM301

SM030

UT564

UT224K

NM300

SM4812

WP37

WP34

WP33

WP39

WM403

WP40

WM405

SM435

WM402*2

SM410*2

SM410*2

WP32

WP38

 
WM402*2

SM410*2


E

F007K PARTS LIST FOR UTJ-K GROUP P.8

A
B
C
D
E

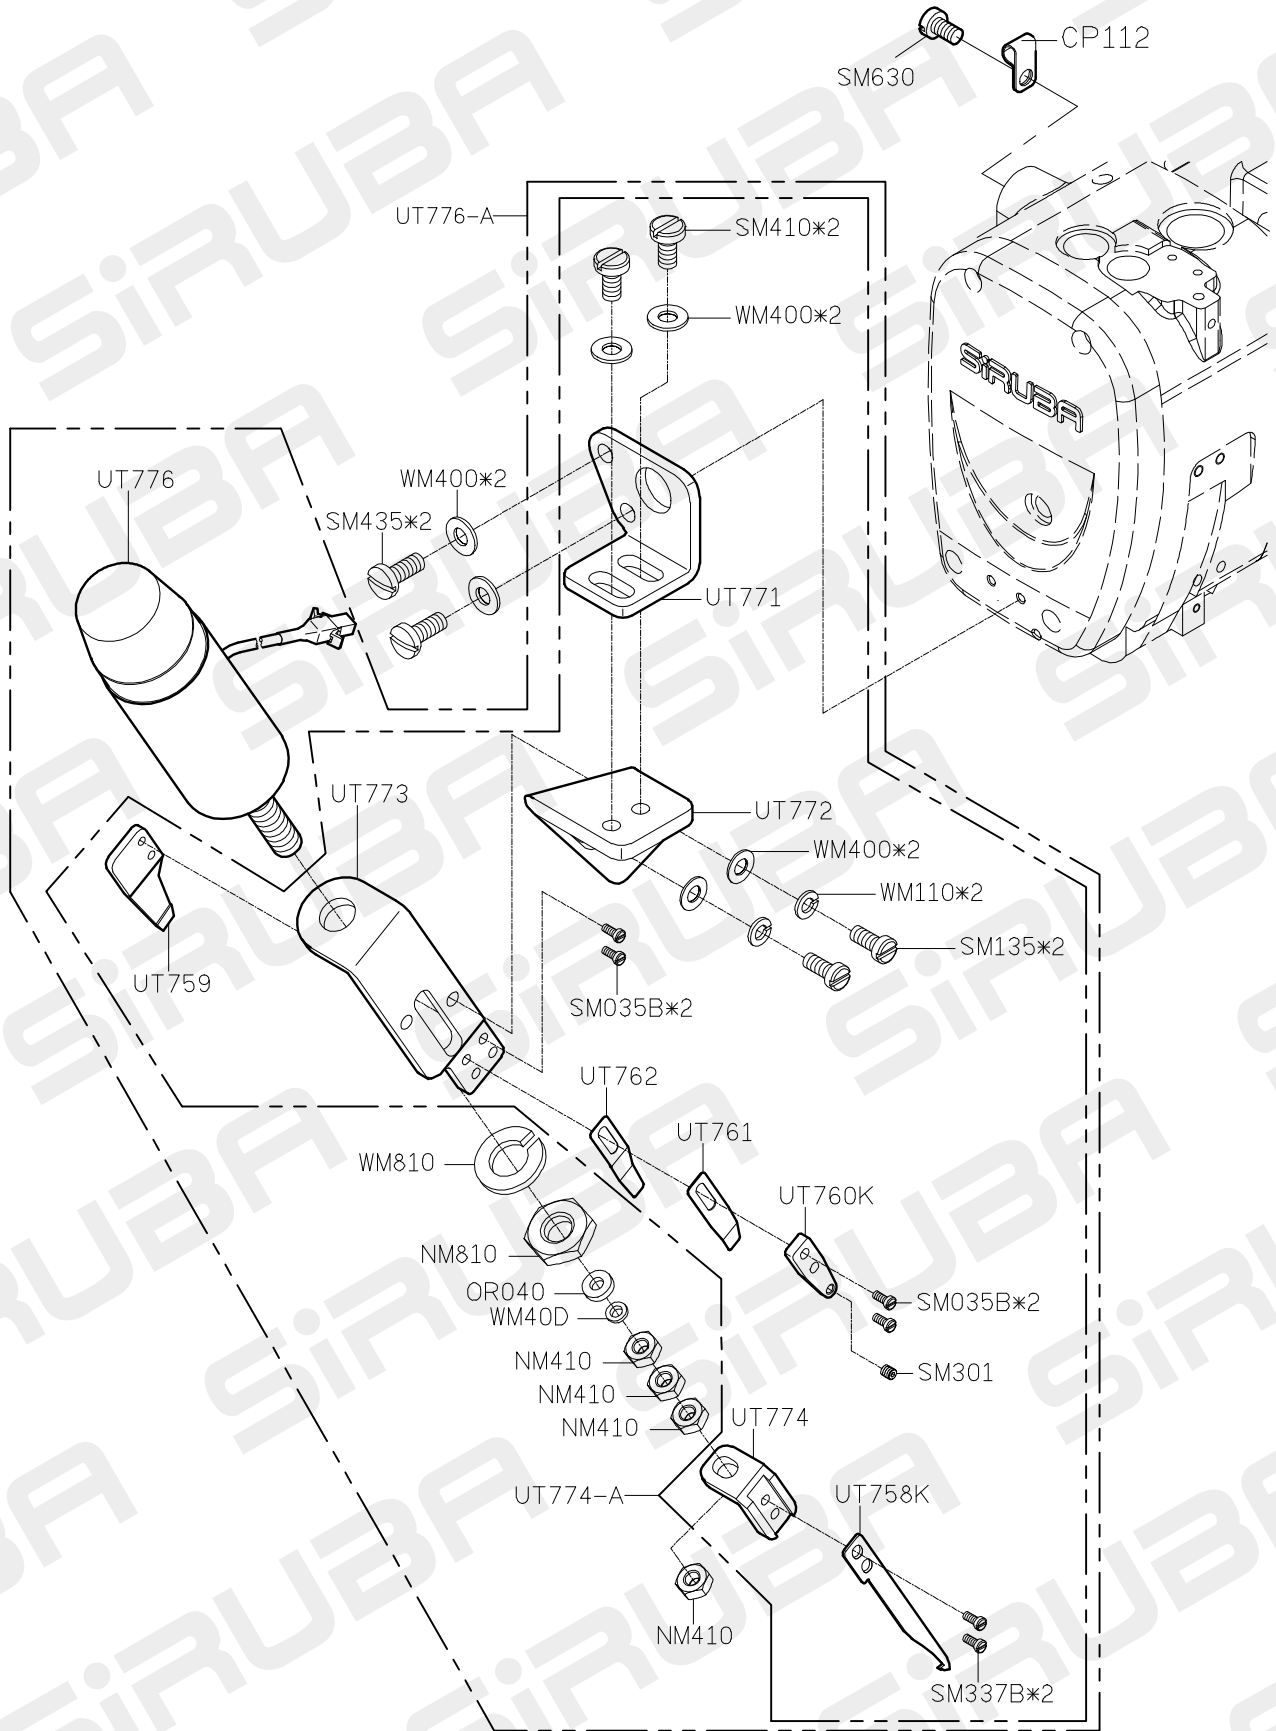


 F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.9-1

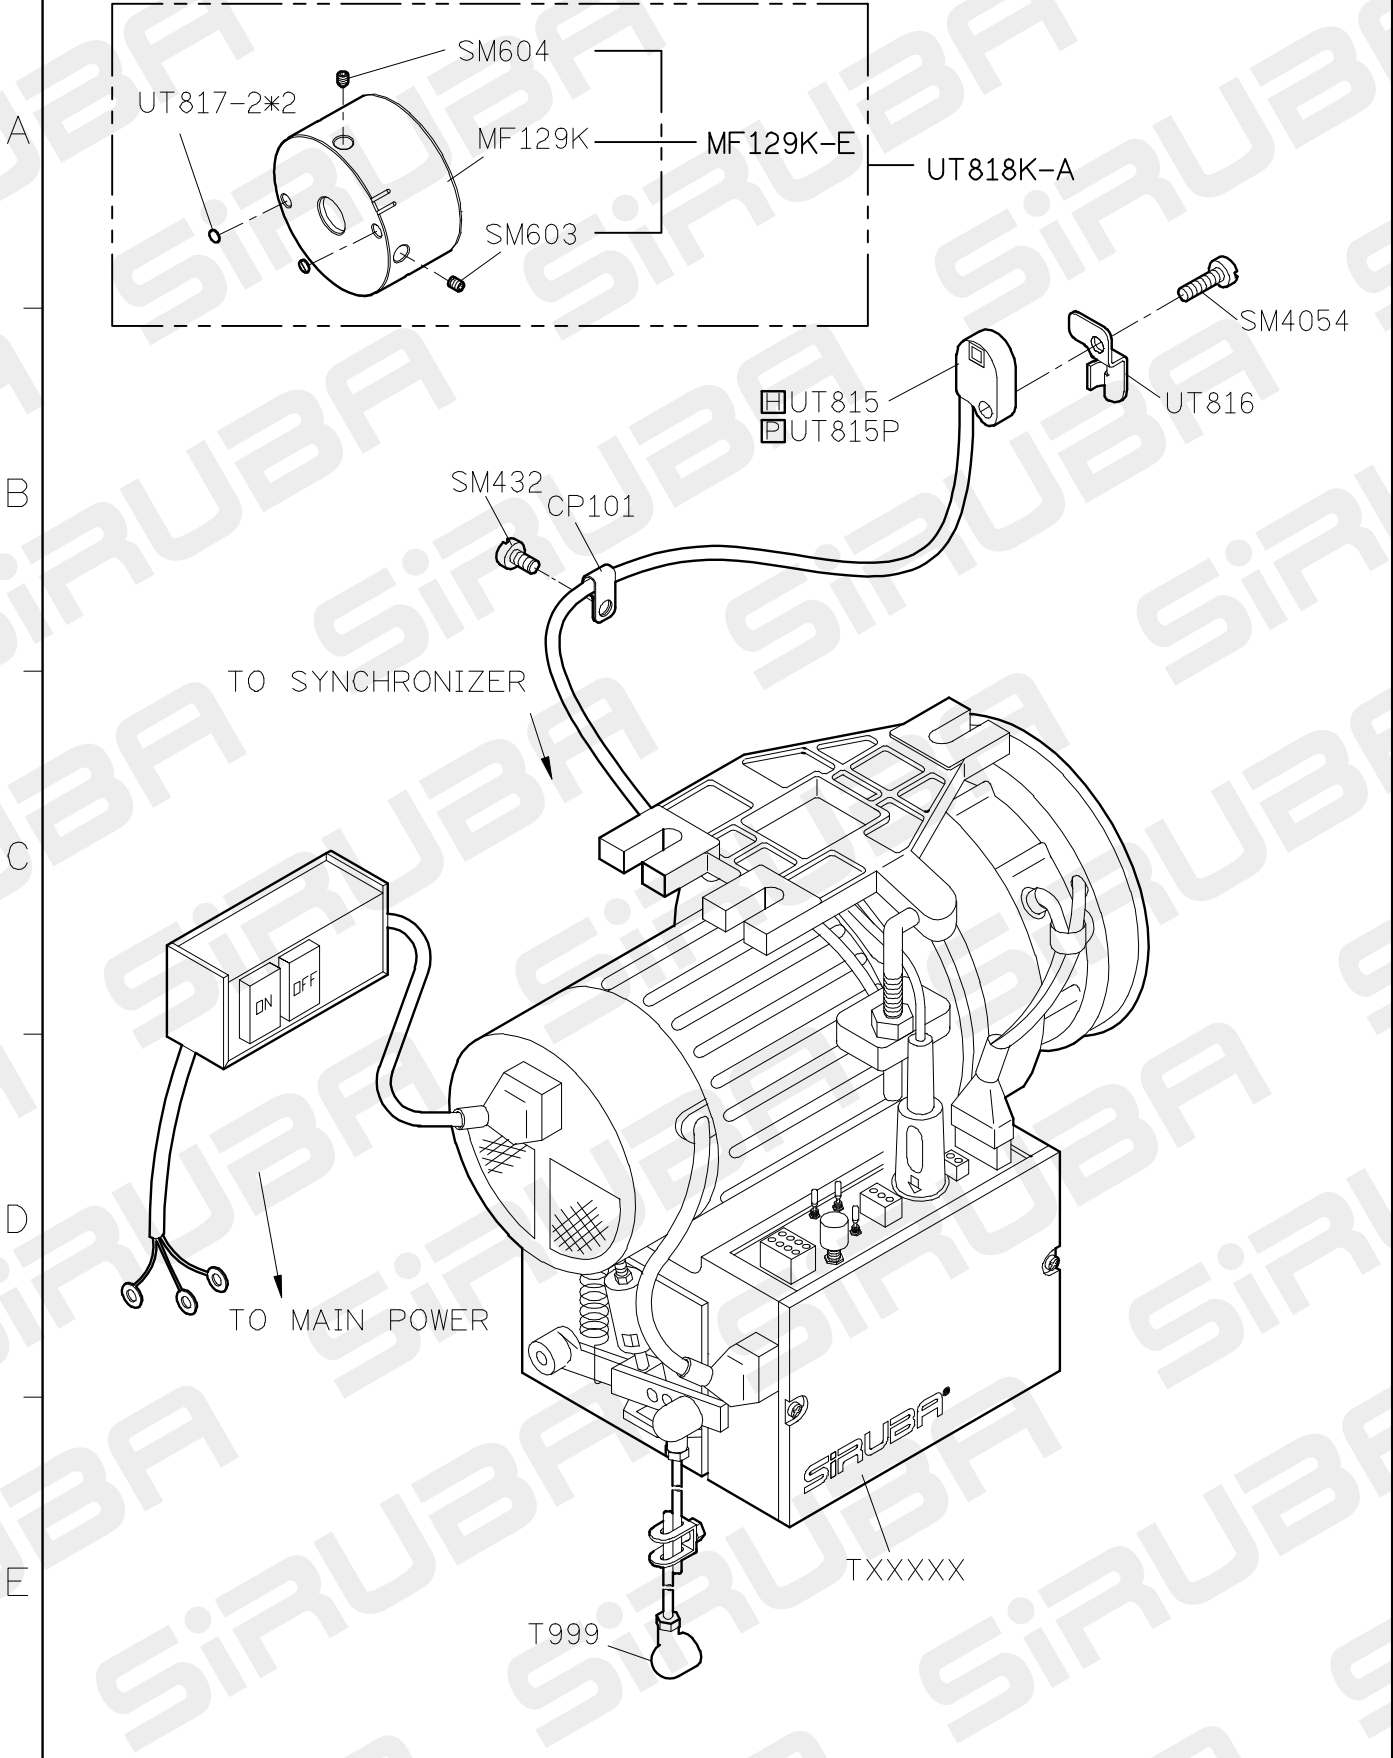


F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.9-2

 A

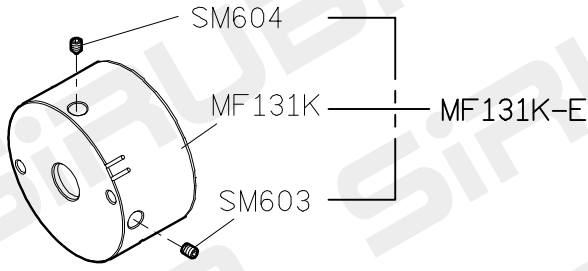

B

 C

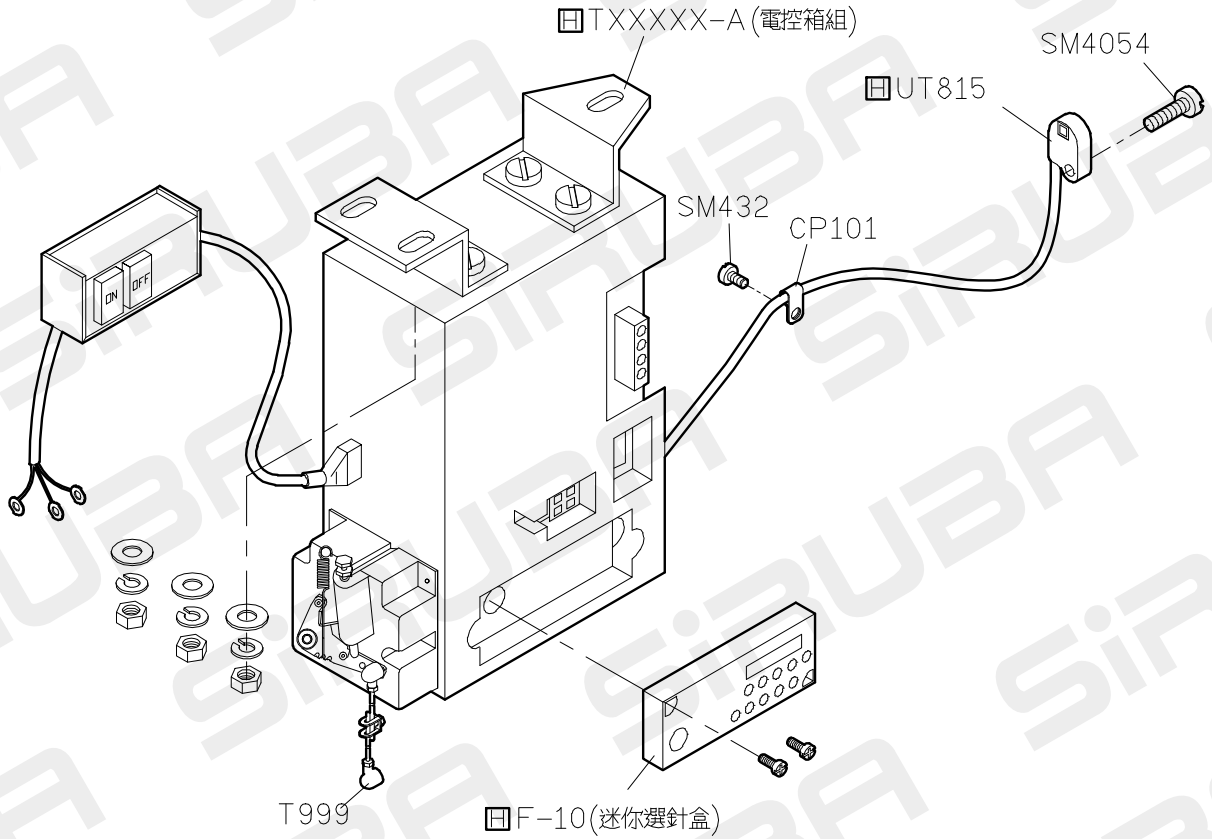

D

E

1 FOR F007KD/F858KD

 
2 FOR H牌馬達 (HVP-20)

3

4

5 10/11/11

F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.9-3

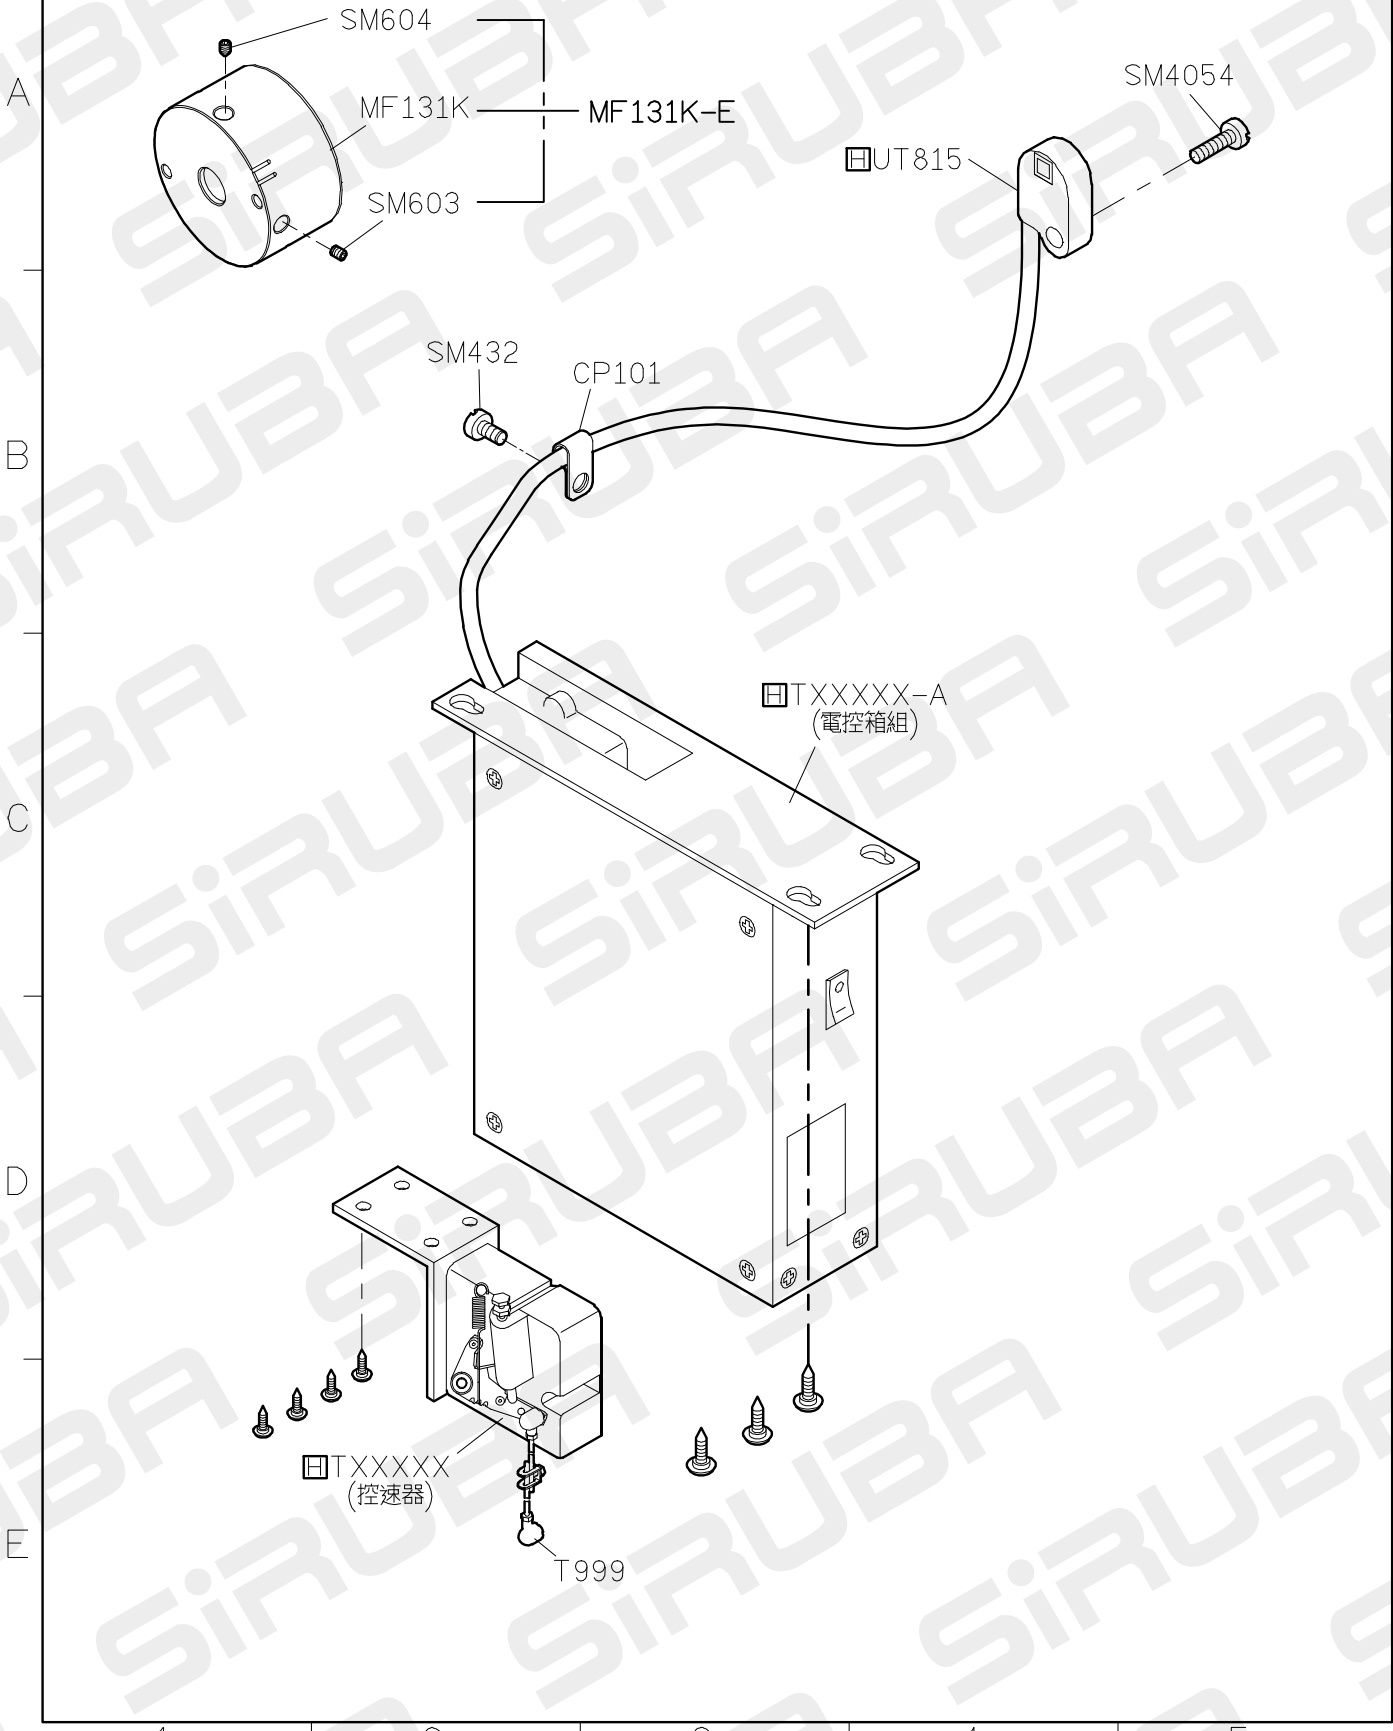


1 FOR F007KD/F858KD

2 FOR H牌馬達 (HVP-70)

4

5 10/11/11

 F007K PARTS LIST FOR UTJ-K(UTK-K) GROUP P.9-4

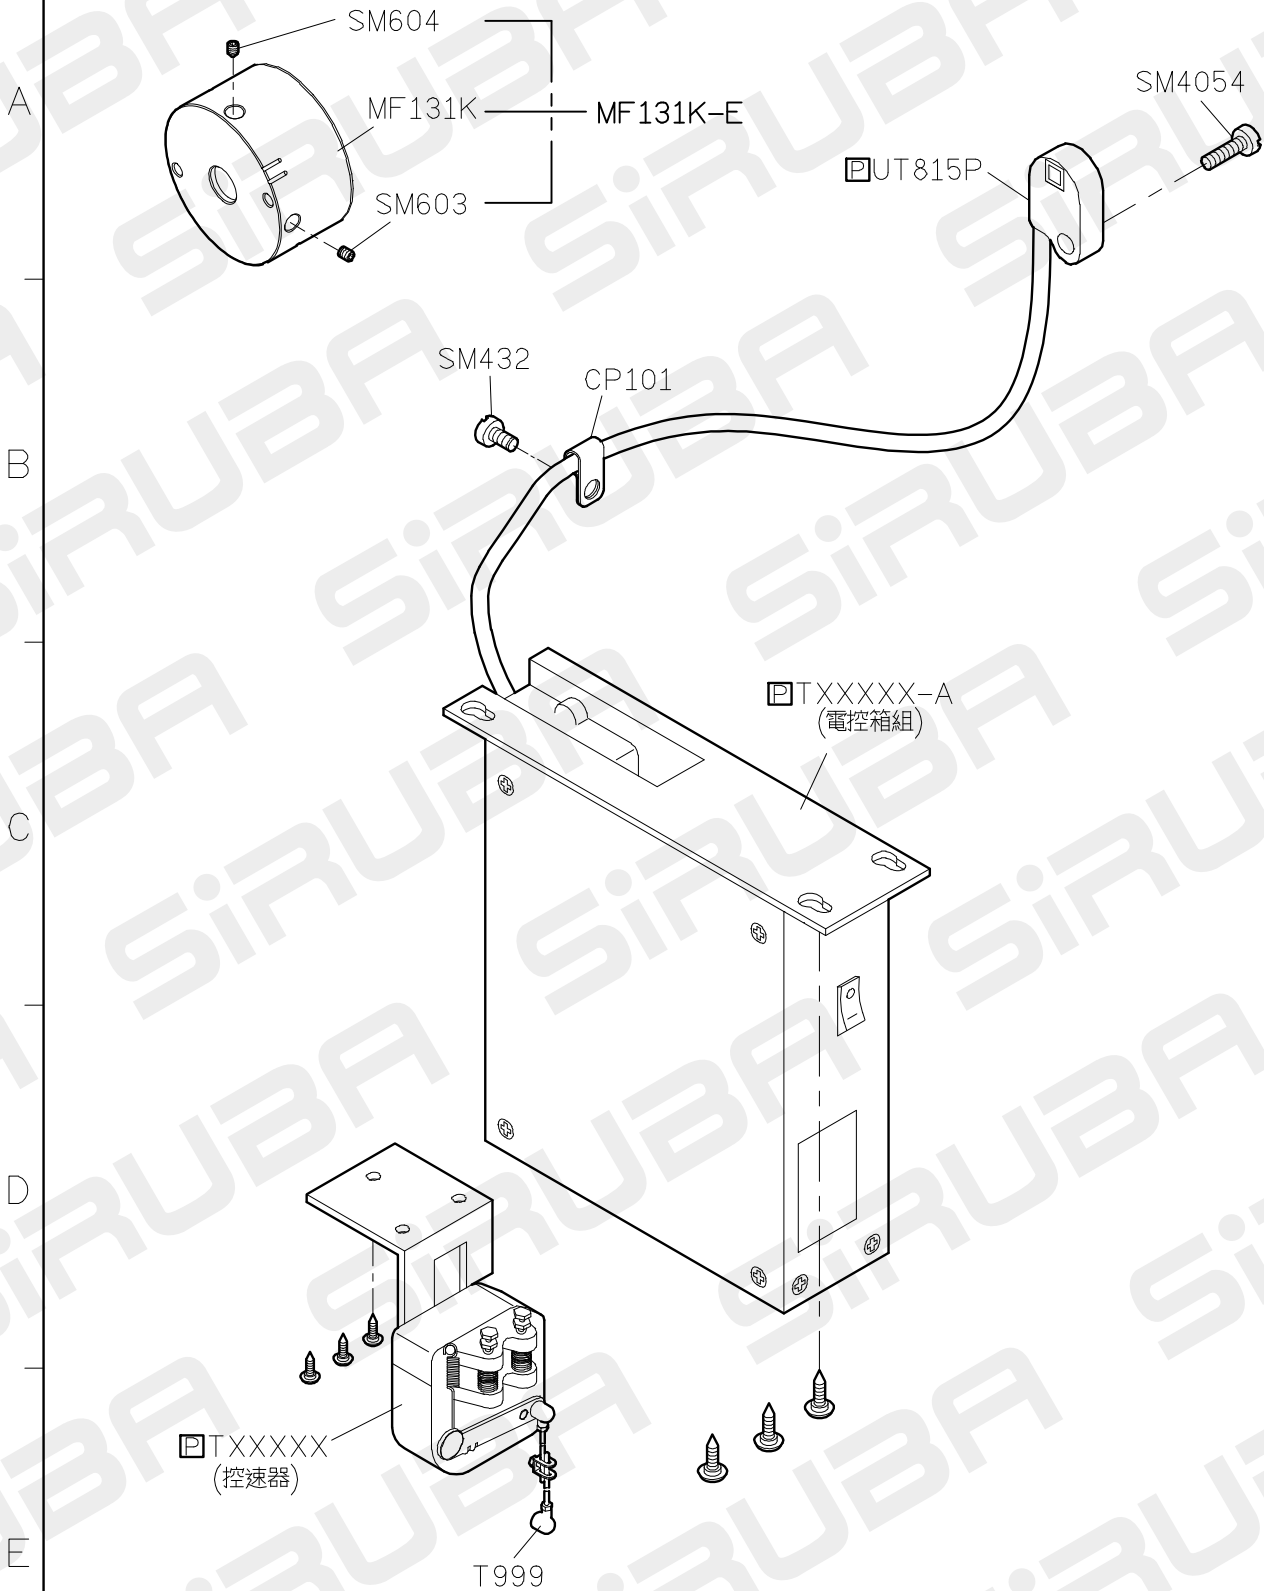

1 FOR F007KD/F858KD

2 FOR P牌馬達

3

4

5